


⑥ **Safety Instructions  
Tile Cutting Machine**

Please read and save these instructions.

7

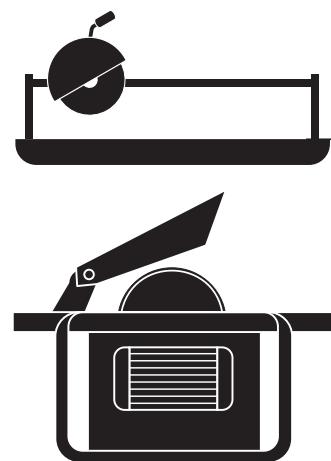



GB Note the instructions for use!



GB Segmented diamond cutting wheels must not be used



GB Important! Risk of injury



GB Wear ear muffs!



GB Wear safety goggles!



GB Wear safety gloves

GB

**SAFETY INSTRUCTIONS**

**Warning!** When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following.

Read all these instructions before attempting to operate this product and safe these instructions.

**1. Keep work area clean**

- Cluttered areas and benches invite injuries.

**2. Consider work area environment**

- Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit. Don't use power tools in presence of flammable liquids or gases.

**3. Guard against electric shock**

- Prevent body contact with grounded surfaces (e.g. pipes, radiators, ranges refrigeratiors).

**4. Keep children away**

- Do not let visitors contact tool or extension cord. All visitors should be kept away from work area.

**5. Store idle tools**

- When not in use, tools should be stored in dry, high, or locked-up place, out of the reach of children.

**6. Don't force tool**

- It will do the job better and safer at the rate for which it was intended.

**7. Use right tool**

- Don't force small tools or attachments to do the job of heavy duty tool. Don't use tools for purposes not intended: for example, don't use circular saw for cutting tree limbs or logs.

**8. Dress properly**

- Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and nonskid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.

**9. Use safety glasses**

- Also use face or dust mask if cutting operation is dusty.

**10. Don't abuse cord**

- Never carry tool by cord or yank it to disconnect it from receptacle. Keep cord from heat, oil and sharp edges.

**11. Secure work**

- Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.

**12. Don't overreach**

- Keep proper footing and balance at all times.

**13. Maintain tools with care**

- Keep tools sharp and clean for better and safer performance. Follow instructions for lubricating and changing accessories. Inspect tool cords periodically and, if damaged, have repaired by authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free from oil and grease.

**14. Disconnect tools**

- When not in use, before servicing, and when changing accessories such as blades, bits and cutters.

**15. Remove adjusting keys and wrenches**

- Form the habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.

**16. Avoid unintentional starting**

- Don't carry plugged-in tool with finger on switch. Be sure switch is off when plugging in.

**17. Outdoor use extension cords**

- When tool is used outdoors, use only extension cords intended for use outdoors and so marked.

**18. Stay alert**

- Watch what you are doing. Use common sense. Do not operate tool when you are tired.

**19. Check damaged parts**

- Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instructions manual. Have defective switches replaced by an authorized service center. Do not use tool if switch does not turn it on and off.

**20. Warning**

- The use of any other accessory or attachment other than recommended in this operating instruction or the Einhell catalog may present a risk of personal injury.

**21. Have your tool repaired by an expert**

- This electric appliance is in accordance with the relevant safety rules repairing of electric appliances may be carried out only by experts otherwise it may cause considerable danger for the user.

**22. Connect the dust extraction device**

- Wherever there are facilities for fitting a dust extraction system, make sure it is connected and used.

**GB****Additional safety instructions**

Important! This tile cutting machine is designed for wet cutting only. The machine may only be operated with a non-segmented diamond cutting wheel.

- Wet hands  
Never touch the electrical components of the machine (e.g. switches) with wet hands.
- Plug connections  
All plug connections must be located in a dry place and must not lie on the floor.
- Cooling the cutting wheel  
Make sure that the cutting wheel is cooled with water during the complete cutting process.
- Dry cutting  
Never carry out dry cuts with cutting wheels designed for wet cutting.
- Dust mask  
Always wear a protective dust mask when cutting tiles.
- Diamond cutting wheels  
Do not feed the tile into the machine any faster than the cutting wheel can cut.
- Selecting the cutting wheel  
Select the diamond cutting wheel to suit the material you want to cut.
- Assembling the cutting wheel  
Before you install the cutting wheel, check the spindle, spindle nut and flanges for damage or a loose fit. Replace damaged or worn parts without delay.
- Direction of rotation of the cutting wheel  
Make sure that directional arrow on the cutting wheel coincides with the rotational direction of the motor shaft.
- Cutting wheel spindle  
Make sure that the diameter of the hole in the cutting wheel conforms with the diameter of the cutting wheel spindle on the machine.
- Cutting wheel safety hood  
Only use the tile cutting machine with a properly fitted and adjusted safety hood.
- Cutting wheel speed  
Do not exceed the safe operating speed of the cutting wheel.
- Sanding/grinding with the cutting wheel  
Do not try to use the cutting wheel for sanding or grinding jobs, i.e. to sand/grind the edge of a cut tile. Also, do not use the machine for radius cuts or round cuts.
- This tile cutting machine is suitable only for household use.
- Deceleration time of the cutting wheel  
After switching off the machine, the cutting wheel need 40 seconds before coming to a standstill.

Wait until the cutting wheel has stopped completely, then pull the power plug out of the socket outlet and, if necessary, only then touch the machine's rotating components.

- Avoid touching the rotating cutting wheel at all when the machine is in operation.
- The electric tool must never be used without the PRCD plug supplied with it.
- Keep water away from electrical parts of the tool and from persons in the work area!
- If the plug or the power cable are damaged they must be replaced either by the manufacturer or by a service company authorized by the manufacturer.

**Do not lose these safety instructions.**