

## 2200W PETROL GENERATOR

BT-PG 2000/1

## **QUICK START** GUIDE

Easy steps to getting started.

- 1. Check the appliance wattage rating you wish to connect to the generator. DO NOT connect if they exceed 2200W\*.
  - \*This generator can operate up to 2200W for 2 mins. For efficient continuous power, we would recommend a wattage rating of 2000W.
- 2. You must unplug any load from the generator before starting to prevent damage to any appliance.
- 3. Ensure that the engine has oil. This generator is supplied with NO OIL in the engine and the engine will not start without it. Please use SAE #30 4 stroke oil.
- 4. Fuel the generator with Unleaded fuel and check the level via the fuel gauge.
- 5. It is advisable to properly earth-ground (4) your generator before starting using a wire and a small earth stake. Note: The wire and earth stake are not supplied with the unit.
- 6. Open the petrol cock (13) by turning it down.
- 7. Move the ON/OFF switch (10) to position "ON".
- 8. Move the choke lever (11) to position IØI.
- 9. Start the engine with the reversing starter (12) by pulling the handle forcefully. If the engine does not start, pull the handle again.
- 10. Push the choke lever (11) back again after the engine has started.
- 11. IF IN DOUBT PLEASE REFER TO THE MANUAL PROVIDED.

