



## Available as special accessories



18V 5,2 Ah Power-X-Change  
Battery  
Item No.: 4511357  
Bar Code: 4006825598865  
Einhell Accessory



18V 30min Power-X-Change  
Power Tools Accessory  
Item No.: 4512011  
Bar Code: 4006825587029  
Einhell Accessory



18V 1,5 Ah Power-X-Change  
Battery  
Item No.: 4511340  
Bar Code: 4006825590586  
Einhell Accessory



18V 3,0 Ah Power-X-Change  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



Ersatzschwert GC-EC 750 T  
Chain Saw Accessory  
Item No.: 4500168  
Bar Code: 4006825606348  
Einhell Grey



Ersatzkette GC-EC 750 T  
Chain Saw Accessory  
Item No.: 4500188  
Bar Code: 4006825606355  
Einhell Grey