



Einhell

EXPERT Plus

POWER X CHANGE

TE-JS 18 Li - Solo

Cordless Jig Saw

Item No.: 4321200

Ident No.: 11025

Bar Code: 4006825601398

The TE-JS 18 Li – Solo cordless jigsaw is a powerful tool for diverse sawing jobs. The selectable pendulum action and very smooth operation enable fast and precise cuts. The universal blade holder without tools saves valuable time, while the integrated plastic sliding element protects sensitive workpieces. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.

Features

- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- LED light to illuminate the cutting area
- Integrated plastic sliding element for sensitive workpieces
- Additional attachable cutting line guide for exact cutting
- Complete with chip guard for cuts without splintering
- Supplied without battery and charger (available separately)



Technical Data

- | | |
|-----------------------------|------------------------|
| - Number of strokes | 2400 min ⁻¹ |
| - Stroke height | 25.4 mm |
| - Cutting depth in wood | 80 mm |
| - Cutting depth in plastic | 12 mm |
| - Cutting depth in steel | 10 mm |
| - Max. bevel cuts | 47 ° |
| - Toolless saw blade change | yes |

Logistic Data

- | | |
|--------------------------------------|---------------------|
| - Product weight | 2.116 kg |
| - Gross weight single packaging | 2.29 kg |
| - Dimensions single packaging | 235 x 90 x 225 mm |
| - Pieces per export carton | 5 Pieces |
| - Gross weight export carton | 15 kg |
| - Container quantity (20"/40"/40"HC) | 4575 9480 11115 |



Available as special accessories



18V 5,2 Ah Power-X-Change
Battery
Item No.: 4511357
Bar Code: 4006825598865
Einhell Accessory



18V 30min Power-X-Change
Power Tools Accessory
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V Starter-Kit Power-X-Change
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 1,5 Ah Power-X-Change
Battery
Item No.: 4511340
Bar Code: 4006825590586
Einhell Accessory



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory