



## OPERATION

### 5. SCRAPING

1. Turn multi function tool on and select appropriate speed.

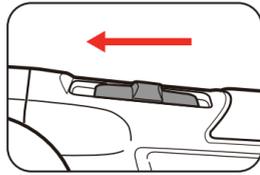

2. Place multi function tool on the workpiece at an angle of approximately 10-15°.

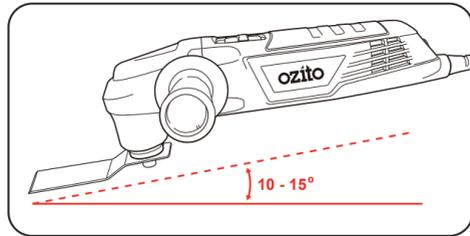

3. Allow the scraper to do the work; do not apply heavy pressure to the multi function tool. This may cause the multi function tool to overload or cut into the surface of the workpiece.

## MAINTENANCE

**WARNING!** BEFORE CARRYING OUT ANY MAINTENANCE PROCEDURES, ENSURE THE TOOL IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY.

- Keep the ventilation vents of the multi function tool clean at all times, if possible, prevent foreign matter from entering the vents.
- After each use, blow air through the multi function tool housing to ensure it is free from all dust particles which may build up. Build up of dust particles may cause the tool to overheat and fail.
- If the enclosure of the multi function tool requires cleaning, do not use solvents but a moist soft cloth only. Never let any liquid get inside the multi function tool; never immerse any part of the multi function tool into a liquid.

### Carbon Brushes

When the carbon brushes wear out, the multi function tool will spark and/or stop. Discontinue use as soon as this happens. They should be replaced prior to recommencing use of the multi function tool. Carbon brushes are a wearing component of the tool and therefore are not covered under warranty. Continuing to use the multi function tool when carbon brushes need to be replaced may cause permanent damage. Carbon brushes will wear out after many uses but when the carbon brushes need to be replaced, take the multi function tool to an electrician or a power tool repairer for a quick and low cost replacement. Always replace both carbon brushes at the same time.

*Note: Ozito Industries will not be responsible for any damage or injuries caused by the repair of the multi function tool by an unauthorised person or by mishandling of the multi function tool.*

## TROUBLESHOOTING

### Sparking visible through the housing air vents

A small amount of sparking may be visible through the housing vents. This is normal and does not indicate a problem.

### Excessive sparking visible through the housing air vents and/or the multi function tool failing to operate



May indicate the carbon brushes have worn out and need to be replaced. Carbon brushes should only be replaced by a qualified electrician or power tool repairer.

## SPARE PARTS

Spare parts can be ordered from the Special Orders Desk at your local Bunnings Warehouse or Homebase store.

For further information, or any parts visit

[www.ozito-diy.co.uk](http://www.ozito-diy.co.uk) or contact Ozito Customer Service:

Great Britain: 0151 294 4488

Ireland: 1850 882711

E-mail: [enquires@ozito-diy.co.uk](mailto:enquires@ozito-diy.co.uk)

## DESCRIPTION OF SYMBOLS

<b>V</b>	Volts	<b>Hz</b>	Hertz
<b>~</b>	Alternating current	<b>W</b>	Watts
<b>/min</b>	Revolutions or reciprocation per minute	<b>n0</b>	No load speed
	Double insulated		Read instruction manual
	Warning		

## ELECTRICAL SAFETY

Before you connect the equipment to the mains supply make sure that the data on the rating plate are identical to the mains data.

This tool is double insulated therefore no earth wire is required.

If the supply cord is damaged, it must be replaced by an electrician or a power tool repairer in order to avoid a hazard.

*Note:* Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the tool.

Using an Extension Lead

Always use an approved extension lead suitable for the power input of this tool. Before use, inspect the extension lead for signs of damage, wear and ageing. Replace the extension lead if damaged or defective.

When using an extension lead on a reel, always unwind the lead completely. Use of an extension lead not suitable for the power input of the tool or which is damaged or defective may result in a risk of fire and electric shock.

## GENERAL POWER TOOL SAFETY WARNINGS

**WARNING!** Read all the safety information, instructions, illustrations and technical data provided on or with this power tool. Failure to adhere to the following instructions may result in electric shock, fire and/or serious injury.

Keep all the safety information and instructions in a safe place for future use.

The term „power tool“ used in the safety information and instructions refers to power tools operated from the mains power supply (with a power cable) and to battery operated power tools (without a power cable).

### 1. Workplace safety

- Keep your work area clean and well lit. Untidy or unlit work areas can result in accidents.
- Do not use this power tool in an area where there is a risk of explosion and where there are inflammable liquids, gases or dust. Power tools generate sparks that can ignite dust or vapors.
- Keep children and other people away from the power tool while you are using it. If you are distracted you may lose control of the power tool.

### 2. Electrical safety

- The plug on the power tool must fit into the socket. The socket must not be modified in any way. Do not use adapter plugs together with power tools with a protective earth. Unmodified plugs and matching sockets will reduce the risk of an electric shock.
- Avoid body contact with earthed surfaces such as pipes, heating systems, stoves and refrigerators. There is an increased risk of suffering an electric shock if your body is earthed.
- Keep the power tool out of the rain and away from moisture. The ingress of water into an electric power tool increases the risk of an electric shock.
- Do not use the power cable for a purpose for which it is not designed, for example to carry the power tool, hang it up or to pull the plug out of the socket. Keep the power cable away from heat, oil, sharp edges and moving parts. Power cables that are damaged or tangled increase the risk of an electric shock.
- If you use an electric power tool outdoors, use only extension cables that are suitable for outdoor use. The use of an extension cable which is suitable for outdoor use reduces the risk of an electric shock.
- If you cannot avoid using the power tool in a damp location, use a residual current device (RCD) circuit breaker. The use of a residual current device (RCD) circuit breaker will reduce the risk of suffering an electric shock.

### 3. Safety of persons

- Be careful, watch what you are doing and be sensible and responsible when using an electric power tool. Never use the power tool if you are tired or under the influence of drugs, alcohol or medication. One moment of inattention when using the electric tool can result in serious injuries.
- Wear personal safety equipment and always wear safety goggles. Wearing personal safety equipment such as dust masks, non-slip safety shoes, a helmet or ear plugs, depending on the type and application of the tool, reduces the risk of injury.
- Make sure that the tool cannot start up accidentally. Ensure that the power tool is switched off before you connect it to the power supply and/or connect the battery pack, pick it up or carry it. If you have your

finger on the switch while carrying the power tool or if you connect the power tool to the power supply while it is switched on, this may cause accidents.

Remove all adjusting tools or wrenches before you switch on the power tool. Any tool or wrench in a rotating part of the power tool could cause injuries.

Avoid abnormal working postures. Make sure you stand squarely and keep your balance at all times.

This will enable you to control the power tool better in unexpected situations.

Wear suitable clothes. Never wear loose fitting clothes or jewelry. Keep hair and clothing away from moving parts. Loose clothing, jewelry or long hair can be caught by moving parts.

If dust extraction devices and dust collection devices can be fitted, they must be connected and must be used correctly. The use of a dust extractor can reduce the dangers posed by dust.

Do not allow yourself to be lulled into a false sense of security and do not ignore the safety regulations covering electric power tools, even if you are familiar with the power tool after having used it many times. Carelessness can lead to serious injuries in just a fraction of a second.

### 4. Using and handling the power tool

Do not overload your power tool. Use the correct electric tool for the job in hand. The correct tool will enable you to work better and more safely within the specific performance range.

Do not use an electric power tool if the switch is defective. An electric power tool that cannot be switched on or off is dangerous and must be repaired.

Pull the plug out of the socket and/or remove the removable battery pack before making any adjustments to the tool, changing plug-in tool parts or putting the power tool down. These precautions will prevent the power tool starting accidentally.

Keep unused electric tools out of the reach of children. Do not allow people who are not familiar with the power tool or who have not read these instructions to use the power tool. Electric tools are dangerous if they are used by inexperienced people.

Look after power tools and plug-in tools with care. Check that moving parts function correctly and do not jam, and whether any parts are broken or damaged such that they adversely affect the function of the power tool. Have damaged parts repaired before you use the power tool. Many accidents are caused by poorly maintained electric tools.

Keep cutting tools sharp and clean. Carefully maintained cutting tools with sharp cutting edges will jam less and are easier to control.

Use the power tool, plug-in tools, etc. as set out in these instructions. Take account of the conditions in your work area and the job in hand. Using electric tools for purposes other than the one for which they are designed can result in dangerous situations.

Keep the handles and grip surfaces dry, clean and free from oil and grease. If the handles and grip surfaces are slippery, it will not be possible to operate and control the power tool safely in unforeseen situations.

### 5. Service

- Have your power tool repaired only by trained personnel using only genuine spare parts. This will ensure that your power tool remains safe to use.

## MULTI FUNCTION TOOL SAFETY INSTRUCTIONS

**WARNING!**

- This tool may only be used for dry grinding/sanding operations.
- Always guide the power cable away from the back of the tool.
- Use of the tool on materials containing asbestos is prohibited.
- Always remove the plug from the power supply socket before carrying out any work on the machine (cleaning the sander, changing the sandpaper, etc.).
- Always disconnect the machine by removing the plug from the socket, not by pulling on the power cable.
- Keep your workplace clean and well illuminated.
- Make sure that the workpiece is sufficiently secured so that it cannot slip.
- Keep children away.
- For your own sake, keep the machine clean at all times and check it for signs of damage each time after using it.
- Make sure that the switch is set to OFF before you insert the plug into the power supply socket.
- Make sure of your footing, particularly when working on ladders and platforms.
- Harmful or toxic dust can be produced when working on wood or metal. Touching or inhaling this dust can be harmful for the operator and other persons nearby.
- To protect your health, always wear safety goggles and a dust mask during sanding/grinding work!
- If you discover any damage to the machine, use the exploded diagram and the spare parts list to determine which parts need to be ordered from Customer Service.
- **Important! Wear safety goggles and a dust mask.**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Do not lose these safety instructions.

# ozito

## MULTI FUNCTION TOOL

### 300W

### ORIGINAL INSTRUCTIONS

### SPECIFICATIONS

Motor: 300W  
 Input: 230-240V ~ 50Hz  
 No Load Speed: 15,000-21,000 opm  
 Orbit Angle: 3.2°  
 Sanding Pad Size: 92 x 92 x 92mm  
 Weight: 1.43kg

[ozito-diy.co.uk](http://ozito-diy.co.uk)

# 3 YEAR REPLACEMENT WARRANTY

## WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

1. These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.

2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.

3. The following are not covered by our guarantee:  
 - Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.  
 - Damage to the device caused by abuse or incorrect use (for example overloading the device or the use of unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).

- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.

4. Your Product is guaranteed for a period of 36 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Lithium Ion batteries and chargers are covered by a 12 month warranty. Warranty excludes consumable parts, for example: carbon brushes, blades, sanding paper, etc. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CUSTOMER SERVICE HELPLINE  
 GB: 0151 294 4488  
 IRL: 1850 882711  
[Ozito-diy.co.uk](http://Ozito-diy.co.uk)

### WHAT'S IN THE BOX



#### Multi Function Tool



#### Sanding Pad & Paper x 15



#### Dust Collection Accessory



#### Scraper & Triangular Rasp



#### Straight Blade x 2



#### Semi Circular Blade




#### Grout Removal Disc

MFR-2200U

# KNOW YOUR PRODUCT



## MULTI FUNCTION TOOL

- 1. Accessory Drive Spindle
- 2. Side Handle
- 3. On/Off Switch
- 4. Rear Handle
- 5. Variable Speed Dial

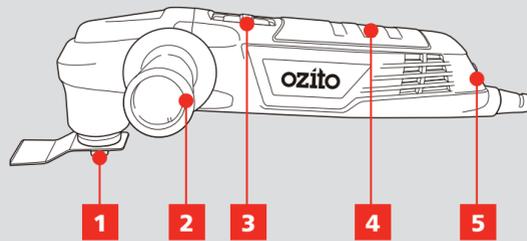

## ACCESSORIES

- 6. Semi Circular Blade (Wood, Plastic & Metal)
- 7. Straight Blade x 2 (Wood & Plastic)
- 8. Scraper
- 9. Triangular Rasp
- 10. Grout Removal Disc
- 11. Sanding Pad
- 12. Sanding Paper P60 Grit x 5 P120 Grit x 5 P240 Grit x 5
- 13. Hex Key
- 14. Locking Bolt
- 15. Washer
- 16. Dust Collection Accessory

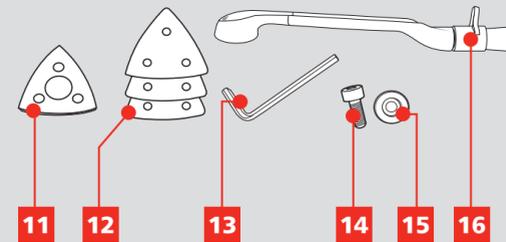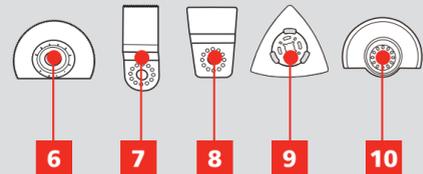

## ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.




# SETUP & PREPARATION

## 1. ASSEMBLY


### Accessory Fitment

- Place accessory over the drive spindle and position to suit angle needed for application.

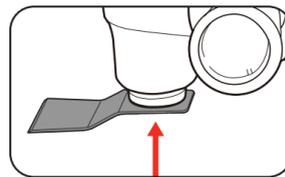


**Note:** Ensure the accessory is sitting flat on spindle and locking pins.

- Place flat side of accessory fitting washer on the accessory then insert locking bolt.

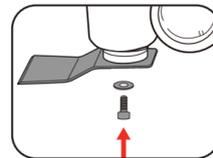


- Tighten locking bolt with hex key.

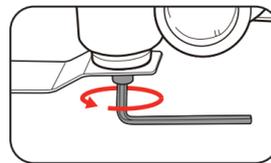


### Accessory Removal

- Loosen locking bolt with hex key.

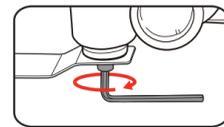

- Remove bolt and accessory.

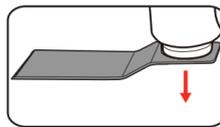


### Side Handle

The side handle can be fitted on either side of the tool. The correct position will be determined by your preferred hand and the operation being performed.


#### Attaching

- Firmly attach the side handle in the desired position.

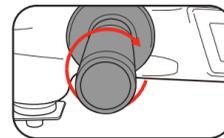

#### Removing


- Remove the side handle.

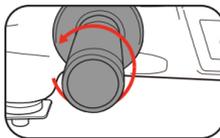


### Fitting the Dust Collection Accessory

The dust collection adaptor can be fitted to your multi function tool to reduce the build up of dust and debris while operating. Accessories must be removed prior to fitting the dust collection accessory.

- Push the parts of the dust collection accessory together.

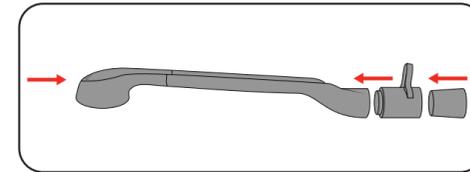

- Place the circular end of the dust collection adaptor over the accessory spindle so that the adaptor rests against the bottom of the tool handle. Push the securing clip over the power cord to secure in place.

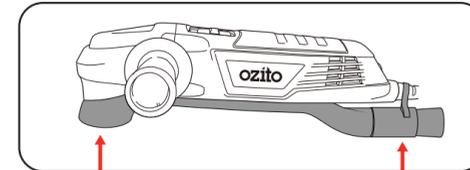

- Connect a vacuum or dust extractor hose to the hose connector.


# OPERATION

## 2. CONTROLS


**CAUTION:** THE POWER SUPPLY FOR THIS PRODUCT SHOULD BE PROTECTED BY A RESIDUAL CURRENT DEVICE (RATED AT 30mA OR LESS).

### On / Off Switch

- To turn on, slide the on/ off switch forward.

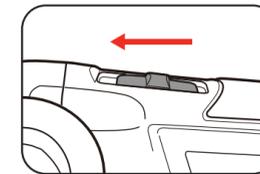


- To turn off, slide the switch backwards.

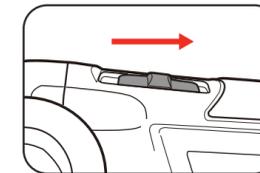


### Variable Speed

For various applications, you will need to select the appropriate speed for the task.

- Turn multi function tool on.

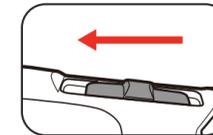


- Scroll through variable speed dial to desired speed setting.

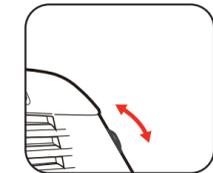

**Note:** The higher the number on the variable speed dial the faster the oscillation frequency of the multi function tool.

## 3. SANDING

- Turn multi function tool on and select appropriate speed.

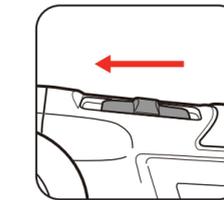



- Place the multi function tool flat on the workpiece.



**Note:** Do not apply heavy pressure to the tool or tilt the sanding base as this will wear out the sanding paper and may damage the sanding pad.

### Changing Sanding Paper


- Align paper to pad and press firmly to attach.
- Peel paper off pad from one of the corners.

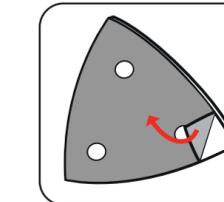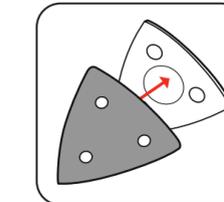


### Triangular Rasp

This accessory is suitable when sanding materials which require a large amount of material removal, for example: rough wood, mortar or adhesive cement / concrete.

- Turn multi function tool on and select appropriate speed.

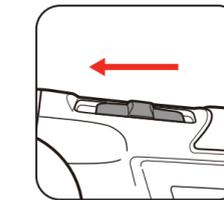

- Place the multi function tool flat on the workpiece.

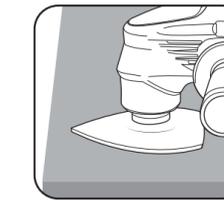


**Note:** Periodically turn the unit off and remove any built-up dust and debris.

## 4. SAWING


**Note:** Ensure blades are not blunt or damaged in any way before commencing application.

### Semi Circular & Straight Blade


- Ensure the workpiece is securely held down.

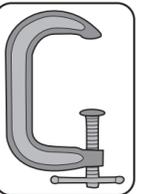

- Turn multi function tool on and select speed.

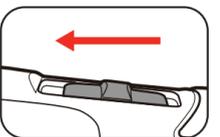


- Use slight pendulum motion when plunge cutting.

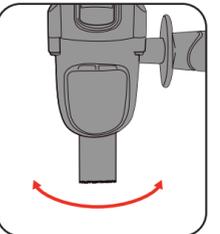


### Grout Removal Disc

- Turn the multi function tool on and select speed.

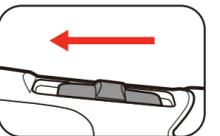

- Use slight pendulum motion when cutting.

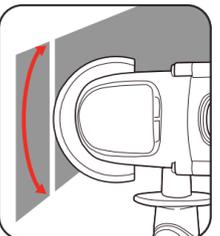

**Note:** Periodically turn the unit off and remove any built-up dust and debris.

**3** YEAR REPLACEMENT WARRANTY