



Einhell

EXPERT Plus

POWER X CHANGE

TE-OS 18/1 Li Solo Cordless Multiple Sander

Item No.: 4460713

Ident No.: 11016

Bar Code: 4006825618181

The TE-OS 18/1 Li – Solo cordless multi sander is a compact and handy sander from Power X-Change family of devices which combines the best ergonomics with maximum functionality for lending surfaces a good finish. The ergonomic grip area with Softgrip is good to hold. Experts appreciate the tool as an indispensable helper which really demonstrates its strengths particularly on small and hard-to-reach surfaces. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.

Features

- Member of the Power X-Change family
- Grip area with softgrip modeled on the palm of a hand
- Small, compact and easy to handle
- Flexible in use for sanding corners and small surfaces
- "Extreme Fix" Velcro fastening for quick change of abrasive paper
- High removal rate with "Extreme Fix" due to reduced slippage
- Solid, rugged aluminium fan impeller for smooth running
- Active dust extraction keeps the work area clean
- Filter box for sanding dust (fits only with 1.5/2.0/2.6 Ah batt.)
- Incl. vacuum cleaner adapter (with every battery usable)
- Incl. six sheets of abrasive paper (3*P120/3*P240)
- Supplied without battery and charger (available separately)



Technical Data

- | | |
|--------------------------------------|-------------------------|
| - Accumulator | 18 V Li-Ion |
| - Oscillating speed | 24000 min ⁻¹ |
| - Oscillating circuit | 1.6 mm |
| - Grinding (sanding) surface (delta) | 104cm ² |
| - Sanding paper size | 93 x 60 x 105 mm |

Logistic Data

- | | |
|-------------------------------|--------------------|
| - Dimensions single packaging | 240 x 108 x 135 mm |
| - Dimensions Export Carton | 465 x 255 x 310 mm |



EXTREME FIX



PERFECT ERGONOMICS



DUST AWAY



ANTI VIBRATION



Available as special accessories



18V 5,2 Ah Power-X-Change
Battery
Item No.: 4511357
Bar Code: 4006825598865
Einhell Accessory



18V 3,0 Ah Power-X-Change
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 30min Power-X-Change
PXC-Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory