
#### Service information

We have competent service partners in all countries named on the guarantee certificate whose contact details can also be found on the guarantee certificate. These partners will help you with all service requests such as repairs, spare and wearing part orders or the purchase of consumables.

In the effect of defects or faults, please register the problem on the internet at www.isc-gmbh.info. Please ensure that you provide a precise description of the problem and answer the following questions in all cases:

- Did the equipment work at all or was it defective from the beginning?
- Did you notice anything (symptom or defect) prior to the failure?
- What malfunction does the equipment have in your opinion (main symptom)?
   Describe this malfunction.


## **Declaration of confirmity**

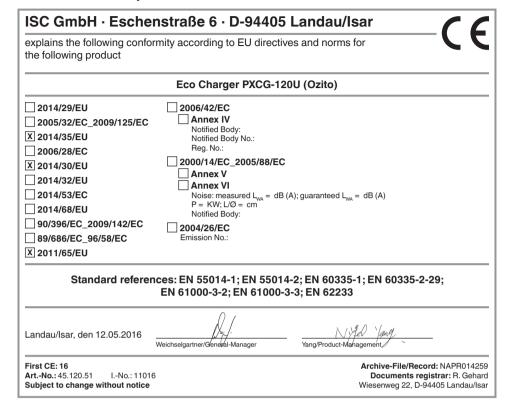



**PXCG-120U** 


## GB Additional operating & safety instructions Eco Charger

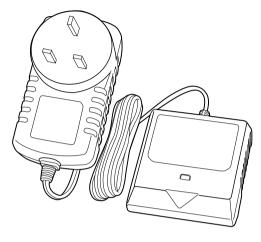





 **Danger!** - Read the operating instructions to reduce the risk of inquiry



The reprinting or reproduction by any other me-

ans, in whole or in part, of documentation and papers accompanying products is permitted only



For use in dry rooms only.



Safety class I

Beiblatt\_PXCG\_120U.indd 1 13.05.16 13:17 size 445 x 210 mm

#### Items supplied

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact our service center or the sales outlet where you made your purchase at the latest within 5 working days after purchasing the product and upon presentation of a valid bill of purchase. Also, refer to the warranty table in the service information at the end of the operating instructions.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.

#### Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

## Proper use

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

## **Technical data**

## Charging unit:

#### ⚠ Important.

The charging unit is allowed to be used only for the lithium-ion batteries of the Power-X-Change series!



For EU countries only

Never place any electric power tools in your household refuse.

To comply with European Directive 2012/19/EC concerning old electric and electronic equipment and its implementation in national laws, old electric power tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the return request:
As an alternative to returning the equipment to the manufacturer, the owner of the electrical equipment must make sure that the equipment is properly disposed of if he no longer wants to keep the equipment. The old equipment can be returned to a suitable collection point that will dispose of the equipment in accordance with the national recycling and waste disposal regulations. This does not apply to any accessories or aids without electrical components supplied with the old equipment.

This consignment contains lithium-ion batteries. In accordance with special provision 188 this consignment is not subject to the ADR regulations. Handle with care. Danger of ignition in case of damage to the consignment package. If the consignment package is damaged: Check and if necessary repackage. For further information contact: 0049 1807 10 20 20 66 (fixed network 14 ct/min, mobile phone max. 42 ct/min) Outside Germany charges will apply instead for a regular call to a landline number in Germany.

# Charger indicator / Eco Charger

Indicator status	Explanations and actions
GREEN (Flashing)	Ready for use The charger is connected to the mains and is ready for use; there is no battery pack in the charger
RED (Illuminated)	Charging The charger is charging the battery pack.
GREEN (Illuminated)	The battery is charged and ready for use. (Charging time for 1.5 Ah battery: 2.0 h) (Charging time for 2.0 Ah battery: 2.5 h) (Charging time for 3.0 Ah battery: 4.0 h) (Charging time for 4.0 Ah battery: 5.0 h) (Charging time for 5.2 Ah battery: 6.5 h)  Action: Take the battery pack out of the charger. Disconnect the charger from the mains supply.
RED (Flashing)	Fault Charging is no longer possible. The battery pack is defective. Action: Never charge a defective battery pack. Take the battery pack out of the charger.
RED & GREEN (Flashing)	Temperature fault The battery pack is too hot (e.g. due to direct sunshine) or too cold (below 0° C). Action: Remove the battery pack and keep it at room temperature (approx. 20° C) for one day .

Beiblatt\_PXCG\_120U.indd 2 13.05.16 13:17 size 445 x 210 mm