



A CHARGER SAFETY WARNINGS

Danger! Read all safety regulations and instructions. Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury

Keep all safety regulations and instructions in a safe place for future use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Replacing the power cable If the power cable for this equipment is damaged, it must be replaced by the manufacturer or OEM after-sales service or by similarly trained personnel to prevent hazards

- a) The charging unit is not allowed to be used for non-rechargeable, normal batteries
- b) Sufficient ventilation is required.
- c) The current and voltage information on the battery pack must be the same as that on the charging unit.
- d) Do not expose the charging unit to splashwater or rain.
 e) The charging unit must be disconnected from the socket outlet before the rechargeable battery is inserted into or removed from the charging station.

f) Do not throw old or damaged batteries into water or fi re. Follow the environmental protection directives.

g) A defective or no longer chargeable battery must be treated as special waste. Dispose of it at a special collection point Do not dispose of it with your normal household waste or throw it into water or fire.

h) Place the charging unit away from all sources of heat.

i) To reduce the risk of electric shock, pull the power plug out of the socket outlet by the plug itself and not by the cable when you want to disconnect the charging unit from the power supply.

j) Do not take the charging unit apart. Take it to an authorized repair center if servicing or repairs are needed. Incorrect assembly can result in an electric shock and even death or fi re.

k) Children must always be supervised in order to ensure that they do not play with the equipment.



FAST CHARGER

ORIGINAL INSTRUCTIONS

SPECIFICATIONS

Innut: 200-250V AC 50-60Hz 21V DC. 3A Output:


30Min - PXBP-150U (18V 1.5Ah) Battery Charge Time:

40Min - PXBP-200U (18V 2.0Ah) 60Min - PXBP-300U (18V 3.0Ah) 75Min - PXBP-400U (18V 4.0Ah) 120Min - PXBP-520U (18V 5.2Ah) 100Min - PXUBP-520U (18V 5.2Ah Ultra)

Caution! The charging unit is allowed to be used only e lithium-ion batteries of the Power X Change range!

ozito-diy.co.uk

- 1. Charging Unit
- Charging Unit LED

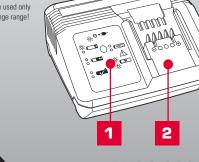



PXCG-030U Art.-No.: 30.003.95 I.-No.: 11018

ELECTRICAL SAFETY

WARNING! When using mains-powered tools, basic safety precautions, including the following, should always be followed to reduce risk of fire, electric shock, personal injury and material damage.

Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating

Save these instructions supplied with this tool for future reference.

Before you connect the charger to the mains supply make sure that the data on the rating plate are identical to the mains data.



This tool charger is double insulated; therefore no earth wire is required.

If the supply cord is damaged, it must be replaced by an electrician or a power tool repairer in order to avoid a hazard. Note: Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the tool.

The power supply for this products charger should be protected by a residual current device (rated at 30mA or less). A residual current device reduces the risk of electric shock.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

DESCRIPTION OF SYMBOLS



Danger! Read the operating instructions to reduce the risk of inquiry.



For use in dry rooms only.



Double Insulated (Safety Class II)



Thermal cut out protection

Danger!

The equipment and packaging material are not toys. Do not let children play with plastic bags, foils or small parts. There is a danger of swallowing or suffocating!

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of the iSC GmbH.

Subject to technical changes

DECLARATION OF CONFORMITY

explains the following conformity according to EU directives and norms for the following product Fast Charger PXCG-030U (Ozito)		
	ndard references: EN 603 EN 55014-1; EN 55014-2; I	35-1; EN 60335-2-29; EN 61000-3-2; EN 61000-3-3
Landau/Isar, den 02.03.2018	Weichselgartner/Genekal-Manager	Yang/Product-Mahagement
First CE: 18 ArtNo.: 30.003.95 INo.: 11018 Subject to change without notice	3	Archive-File/Record: NAPR018733 Documents registrar: Alex Kurz Wiesenweg 22, D-94405 Landau/Isa

1. CHARGING A BATTERY

This charger is compatible with batteries from the 18V Ozito Power X Change range available through your local Bunnings Warehouse: Product availability may differ between countries.

PXBP-150U: 1.5Ah BatteryPXBP-200U: 2.0Ah BatteryPXBP-300U: 3.0Ah Battery

PXBP-400U: 4.0Ah BatteryPXBP-520U: 5.2Ah Battery

PXUBP-520U: 5.2Ah Ultra Battery




CAUTION: THE CHARGER SHOULD BE PROTECTED BY A RESIDUAL CURRENT DEVICE (RATED AT 30MA OR LESS).


 Connect the charger to the power supply and the LED will flash green showing power is being supplied to the charger.




Align and then slide the ribs on the battery into the recess in the charger.

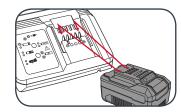

3. The red LED will illuminate while the battery charges.

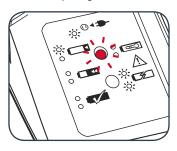

4. The green LED will illuminate once the battery is charged.

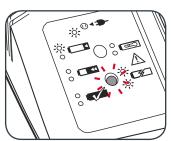

Charger LED Indicator Lights		
LED Indicator	Situation	
GREEN (Flashing)	Stand By (no battery pack is inserted)	
RED (Flashing)	Battery is charging (low charge)	
RED (Illuminated)	Battery is fast charging (mid charge)	
GREEN (Illuminated)	Battery is 85% - 100% charged and is ready for use.	
BOTH(Illuminated)	Battery pack is too hot or too cold (charging will begin automatically when battery reaches correct charging temperature).	
BOTH (Flashing)	The battery is deffective, charging is no longer possible. Do not charge. Contact Ozito Customer Service.	

Mounting the charging unit on a wall

The charging unit can be mounted to a wall or workbench.

The correct dimensions for drill holes can be found on the back of the charging unit.

Note: When mounting on a wall you must use suitable screws, e.g. M3 pan-head screws, in order to prevent damage to the housing and risk of falling.

2. MAINTENANCE

- Disconnect the charger from power source before cleaning
- Keep the charger in a dry place out of reach of children.
- If the enclosure of the charger requires cleaning, do not use solvents. Use a dry, soft cloth only to wipe down the surface. Never let any liquid get inside the charger; never immerse any part of the drill into a charger.
- There are no other parts inside the charger which require maintenance. Do not take the charger apart. If the charger is damaged, contact your supplier or the manufacturer.

WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

- These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.
- 2. The warranty services only covers defects due to material or manufacturing faults on a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.
- 3. The following are not covered by our guarantee:
- Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
- Damage to the device caused by abuse or incorrect use (for example overloading the device or the use or unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
- Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.
- 4. Your Product is guaranteed for a period of 12 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Warranty excludes consumable parts. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CUSTOMER SERVICE HELPLINE GB: 0151 294 4488 IRL: 1850 882711

Ozito-diy.co.uk

ONLINE MANUAL

Scan this QR Code with your mobile device to take you to the online manual.



OZITO UK Champion's Business Park, Unit 10, 1st Floor, Arrowe Brook Road, Upton, Wirral, Merseyside, CH49 OAB