



Einhell

EXPERT PLUS



Cordless Circular Saw

TE-CS 18 Li-Solo

Item No.: 4331200

Ident No.: 11015

Bar Code: 4006825612394

The Einhell cordless TE-CS 18 Li-solo handheld circular saw is compact, light and easy to work with, and it is a member of the Einhell Power X-Change family. The high-performance lithium-ion batteries are used in all Power X-Change products. You can adjust the cutting depth and tilt angle on the hand-held circular saw without any tools. A spindle lock makes it easy to swap sawblades with a 10 mm or 16 mm bore. High-quality LEDs and a dust extractor adapter to keep the workplace clean. The TE-CS 18 Li-solo is compatible with the Einhell guide rail which is available separately. The saw is supplied without a battery and charger which are available separately.

Features & Benefits

- A member of the Power X-Change family
- Small, light and handy – for comfortable operation
- Easy adjustment without tools (cutting depth, tilt angle)
- Dust extractor adapter to keep the workplace clean
- Compatible with the Einhell guide rail
- Easy changing of the saw blade thanks to the spindle lock
- High quality aluminium base plate
- Sawblades with 10mm or 16mm core can be used
- High-quality LED for optimum illumination of the cutting area
- Supplied without battery and charger (available separately)



Technical Data

- No-load speed 4200 min⁻¹
- Saw Blade Ø150 x Ø10 mm
- Number of saw teeth 24 Pieces
- Cutting depth at 90° 48 mm
- Cutting depth at 45° 32 mm



TOOLLESS



RIGHT-HAND SIDE



EASY HANDLING

Logistic Data

- Product weight 2.34 kg
- Gross weight single packaging 3.22 kg
- Dimensions single packaging 315 x 200 x 285 mm
- Pieces per export carton 2 Pieces
- Gross weight export carton 7.5 kg
- Dimensions export carton 420 x 335 x 310 mm
- Container quantity (20"/40"/40"HC) 1280 | 2654 | 3112



Available as special accessories



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power-X-Twincharger 3 A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0 Ah Power-X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 30min Power-X-Change
Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



Power-X-Boostcharger 6 A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



Guide rail Alu 2x1000mm
Circular Saw Accessory
Item No.: 4502118
Bar Code: 4006825632675
Einhell Accessory