







Cordless Circular Saw

TE-CS 18/165 Li-Solo

Item No.: 4331204

Ident No.: 11017

Bar Code: 4006825626360

The Einhell TE-CS 18/165 Li-solo cordless handheld circular saw is light and easy to work with and enables precise cuts with a speed of up to 4200 rpm. As a Power X-Change family member it is powered by high-performance 18 V rechargeable battery. The max. cutting depth is 54 mm thanks to the 165 mm saw blade (at 90°/or 35 mm at 45°). The sawing depth and tilt angle can be adjusted without tools. The spindle lock makes it easy to change the saw blade. The high-quality saw table is made of alu. The dust extraction adapter keeps the workplace clean. Optimum illumination of the cutting area is provided by a high-quality LED light. The handheld circular saw is compatible with the Einhell guide rail. The battery & charger are available separately

Features & Benefits

- A member of the Power X-Change family
- Small, light and handy for comfortable operation
- Max. cutting depth of 54mm due to 165mm saw blade
- Easy adjustment without tools (cutting depth, tilt angle)
- Dust extractor adapter to keep the workplace clean
- Compatible with the Einhell guide rail
- Easy changing of the saw blade thanks to the spindle lock
- High quality aluminium base plate
- High-quality LED for optimum illumination of the cutting area
- Supplied without battery and charger (available separately)

Technical Data

- No-load speed 4200 min^-1 - Saw Blade Ø165 x Ø20 mm - Number of saw teeth 24 Pieces - Cutting depth at 90° 54 mm - Cutting depth at 45° 35 mm

Logistic Data

- Product weight 2.601 kg - Gross weight single packaging 3.342 kg

- Dimensions single packaging 315 x 200 x 285 mm

- Pieces per export carton 2 Pieces - Gross weight export carton 7.91 kg

- Dimensions export carton 420 x 340 x 310 mm - Container quantity (20"/40"/40"HC) 1260 | 2620 | 3070



















Available as special accessories



18V 1,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512021 Bar Code: 4006825601350 Einhell Accessory



18V 4,0 Ah Power-X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 2,6Ah P-X-C Plus Battery Item No.: 4511436 Bar Code: 4006825616590 Einhell Accessory



18V 5,2 Ah P-X-C Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power-X-Twincharger 3 A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



18V 2,0 Ah Power-X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 30min Power-X-Change Charger Item No.: 4512011 Bar Code: 4006825587029 Einhell Accessory



Power-X-Boostcharger 6 A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



Guide rail Alu 2x1000mm Circular Saw Accessory Item No.: 4502118 Bar Code: 4006825632675 Einhell Accessory