OZILO 12VOLT

FAST CHARGER

12V Lithium Ion

INSTRUCTION MANUAL

SPECIFICATIONS

Input: Output: Charge Times:

ozito-diy.co.uk Charging Adaptor

100-240V AC 50-60Hz

15V DC, 1700mA 1hr (1.5Ah Battery)

- 1
- Charging Cradle 2
- 3 Charge Indication Lights

YEAR REPLACEMENT WARRANTY

```
ZLCG-112U
```

3

DESCRIPTION OF SYMBOLS

 
v	Volts	Hz	Hertz
ac/~	Alternating current	w	Watts
dc/	Direct current	Ah	Amp hour
mA	Milliamperes	A	Amps
\triangle	Warning	8	Read instruction manual
	Double insulated	凸	Indoor use only
₽	Thermal cut-out protection	Θ	€⊕ Polarity

CHARGER SAFETY WARNINGS Â

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR YOUR BATTERY CHARGER


- Before using the charger read all instructions and cautionary markings on the charger. 1. battery pack and the product using the battery pack.
- This charger is not intended for any uses other than charging rechargeable batteries. Any 2. other use may result in risk of fire, electric shock or electrocution. 3
- Do not place any object on top of the charger or place the charger on a soft surface that may result in excessive internal heat. Place the charger in a position away from any heat source.
- 4. To reduce risk of damage to the electric plug and cord, pull by the plug rather than the cord when disconnecting the charger.
- Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise 5. subjected to damage or stress.
- 6. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in the risk of fire, electric shock or electrocution
- Do not operate the charger if it has received a sharp blow, been dropped or otherwise 7. damaged in any way. Have it checked by an electrician or power tool repairer
- Do not disassemble charger. Take it to an electrician or power tool repairer when 8 service or repair is required. Incorrect reassembly may result in a risk of electric shock, electrocution or fire.
- 9. To reduce risk of electric shock, unplug the charger from the outlet before attempting any cleaning. Removing the battery pack will not reduce this risk.
- Never attempt to connect 2 chargers together. 10.
- DO NOT store or use the tool and battery pack in locations where the temperature may reach 11. or exceed 40°C (such as inside sheds or metal buildings in summer)
- The charger is designed to operate on standard household electrical power (240 volts). 12. Do not attempt to use it on any other voltage!
- 13. The battery pack is not fully charged out of the carton. First read the safety instructions and then follow the charging notes and procedures.
- The longest life and best performance can be obtained if the battery pack is charged 14. when the air temperature is between 18 - 24°C. Do not charge the battery pack in an air temperature below 10°C or above 40°C. This is important and will prevent damage to the battery pack.
- 15. Do not incinerate the battery pack even if it is seriously damaged or is completely worn out. The battery can explode in a fire.
- 16. Never attempt to open the battery pack for any reason. If the plastic housing of the battery pack breaks or cracks, immediately discontinue use and do not recharge
- During charging, the battery must be placed in a well ventilated area 17.

🛕 ELECTRICAL SAFETY



Read the whole manual carefully and make sure you know how to switch the tool off in an emergency, before operating the tool. Save these instructions and other documents supplied with this tool for future reference.

 The charger has been designed for 230V and 240V only. Always check that the power supply corresponds to the voltage on the rating plate.



 \square

This tools charger is double insulated; therefore no earth wire is required.

If the supply cord is damaged, it must be replaced by an electrician or a power tool repairer in order to avoid a hazard.

Note: Double insulation does not take the place of normal safety precautions when operating this tool. The insulation system is for added protection against injury resulting from a possible electrical insulation failure within the tool.

The power supply for this products charger should be protected by a residual current device (rated at 30mA or less). A residual current device reduces the risk of electric shock.

1. CHARGING A BATTERY

Only use this charger with Ozito Home 12Volt batteries.




WARNING: THE POWER SUPPLY FOR THIS CHARGER IS RECOMMENDED FOR USE WITH A RESIDUAL CURRENT DEVICE (RATED AT 30mA OR LESS).


 Connect the charging adaptor to a mains power outlet. The red led light on the back of the plug will illuminate red indicating it is connected correctly.



2 With the battery sitting on a flat surface, align the raised ribs on the battery with the recess in the charging cradle and slide onto the battery ensuring a firm connection.

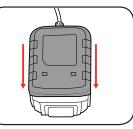


3 The red LED on the charging cradle will illuminate signifying that the battery is charging.

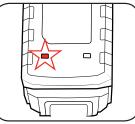

Note: The battery will not develop a memory, it does not have to be fully discharged before recharging.

4 Once the green LED on the charging cradle illuminates, the battery is charged and can be removed from the charging cradle using the battery release button.

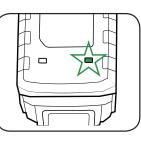

Charger LED Indicator			
LED Indicator	Situation		
RED (Illuminated)	Battery is charging (low charge)		
GREEN (Illuminated)	Battery is fully charged		
RED & GREEN (Flashing)	Battery or Charger fault		
RED & GREEN (Illuminated)	Battery pack is too hot or too cold (remove battery from charger and store at room temperature 20°C. Insert battery again when at correct charging temperature). If this happens again, the battery is defective and needs to be replaced.		

2. MAINTENANCE

- Disconnect the charger from power source before cleaning.
- Keep the charger in a dry place out of reach of children.
- If the enclosure of the charger requires cleaning, do not use solvents. Use a dry, soft cloth only to wipe down the surface. Never let any liquid get inside the charger; never immerse any part of the drill into a charger.
- There are no other parts inside the charger which require maintenance. Do not take the charger apart. If the charger is damaged, contact your supplier or the manufacturer.

WARRANTY

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. You can also contact us by telephone using the customer service number shown. Please note the following terms under which guarantee claims can be made:

- These warranty terms regulate additional warranty services, which the manufacturer mentioned below promises to buyers of its new products in addition to their statutory guarantee claims are not affected by this guarantee. Our guarantee is free of charge to you.
- 2. The warranty services only covers defects due to material or manufacturing faults on

a product which you have bought from the manufacturer mentioned below are limited to either the rectification of said defects on the product or the replacement of the product, whichever we prefer. Please note that our devices are not designed for use in commercial, trade or professional applications. A guarantee contract will not be created if the device has been used by commercial, trade or industrial business or has been exposed to similar stresses during the guarantee period.

- 3. The following are not covered by our guarantee:
- Damage to the device caused by a failure to follow the assembly instructions or due to incorrect installation, a failure to follow the operating instructions (for example connecting it to an incorrect mains voltage or current type) or a failure to follow the maintenance and safety instructions or by exposing the device to abnormal environmental conditions or by lack of care and maintenance.
 Damage to the device caused by abuse or incorrect use (for example overloading the device or the use or unapproved tools or accessories), ingress of foreign bodies into the device (such as sand, stones or dust, transport damage), the use of force or damage caused by external forces (for example by dropping it).
 Damage to the device or parts of the device caused by normal or natural wear or tear or by normal use of the device.
- 4. Your Product is guaranteed for a period of 60 months from the original date of purchase and is intended for DIY (Do It Yourself) use only. Lithium Ion batteries and chargers are covered by a 12 month warranty. Warranty excludes consumable parts, for example: grinding discs. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies if an on-site service is used.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY YOU MUST RETURN THE PRODUCT TO THE PLACE OF PURCHASE WITH YOUR REGISTER RECEIPT.

Please refer to the restrictions of this warranty concerning wearing parts, consumables and missing parts as set out in the service information in these operating instructions.

CUSTOMER SERVICE HELPLINE GB: 0151 294 4488 IRL: 1850 882711 Ozito-diy.co.uk

iSC GmbH · Eschenstraße 6 · 94405 Landau /Isar · Germany