



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18 Li - Solo

Item No.: 4321209

Ident No.: 11018

Bar Code: 4006825640052

The Einhell jigsaw is flexible and is used for quick and precise cutting. Thanks to cordless freedom it can be used far away from the nearest socket outlet in the home, workshop or garage. As a member of the PXC system family, the rechargeable batteries can be used in all the devices from the series. For exact cutting it is really smooth in operation, and for fast cutting there is a selectable pendulum action. The universal blade holder enables the blade to be changed without tools. For optimum visibility there is a dust blow-off function. The integrated plastic sliding element protects sensitive workpieces. The product is supplied complete with a KWB quality saw blade for wood. This product comes without a battery and charger.

Features & Benefits


- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- Integrated plastic sliding element for sensitive workpieces
- Complete with KWB quality saw blade for wood
- Supplied without battery and charger (available separately)

Technical Data

- Number of strokes	2700 min ⁻¹
- Stroke height	20 mm
- Cutting depth in wood	70 mm
- Cutting depth in plastic	10 mm
- Cutting depth in steel	8 mm
- Max. bevel cuts	45 °
- Toolless saw blade change	yes

Logistic Data

- Product weight	1.63 kg
- Gross weight single packaging	2 kg
- Dimensions single packaging	240 x 90 x 215 mm
- Pieces per export carton	5 Pieces
- Gross weight export carton	11 kg
- Container quantity (20"/40"/40"HC)	4485 9290 0

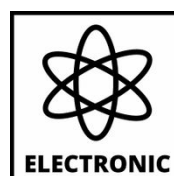

Available as special accessories



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 2,6Ah P-X-C Plus
Battery
Item No.: 4511436
Bar Code: 4006825616590
Einhell Accessory



18V 30min Power X-Change
Charger
Item No.: 4512011
Bar Code: 4006825587029
Einhell Accessory



18V 5,2 Ah P-X-C Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power-X-Boostcharger 6 A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



Power-X-Twincharger 3 A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 4,0 Ah Power-X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 1,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512021
Bar Code: 4006825601350
Einhell Accessory

Battery-Running-Times

cutting length (chipboard 19 mm, in m)

with 1.5 Ah PXC	7	<div></div>
with 2 Ah PXC	9.5	<div></div>
with 2.6 Ah PXC+	12	<div></div>
with 3 Ah PXC	14	<div></div>
with 4 Ah PXC	20	<div></div>
with 5.2 Ah PXC	30	<div></div>
with 5.2 Ah PXC+	30	<div></div>