







**GE-LE 18/190 Li-Solo** 

Item No.: 3424300

Ident No.: 21010

Bar Code: 4006825651287

POWER -CHANGE

The Einhell GE-LE 18/190 Li-Solo cordless lawn edge trimmer is a member of the clever PXC family. For precise results between 36.5 mm to 45 mm there is an adjustable depth setting facility with 3 levels. The twin-bladed cutter delivers perfect results when cutting borders, and exact progress along the lawn is assured by the rollers at the front/back. The soft grip guarantees optimum handling and ergonomics. The adjustable additional handle ensures that the cordless lawn edge trimmer can be guided precisely and safely. The split shaft makes it easy to transport and stow away in minimum space. 1 x 18 V PXC rechargeable battery is needed for operation. The product is supplied without a battery or charger which are available separately.

### **Features & Benefits**

- Member of the Power X-Change family, 1x18V battery necessary
- 3-steps cutting depth adjustment for precise working results
- Double cutting blade delivering perfect cutting of the edges
- Split Shaft easy transport and space-saving storage
- Softgrip ensuring perfect handling and ergonomics
- Adjustable additional handle easy and safe handling
- Guide wheels (front/back) providing accurate working progress
- Knife protection cover guarantee full safety while working
- Supplied without battery and charger (available separately)

### **Technical Data**

Min. cutting depth
Max. cutting depth
cutting depth adjustment
36.5 mm
45 mm
settings

## **Logistic Data**

- Product weight (kg)- Gross weight (kg)4.7

- Dimensions single packaging 305 x 190 x 950 mm

- Pieces per export carton- Gross weight of export carton2 Pieces10.7 kg

- Dimensions export carton 970 x 325 x 400 mm - Container quantity (20"/40"/40"HC) 420 | 840 | 1008





















### Available as special accessories



Ersatzmesser GE-LE 18/190 Li Lawn Trimmer Accessory Item No.: 3405101 Bar Code: 4006825653533 Einhell Accessory



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



2x 3,0Ah & 30min PXC Kit PXC-Starter-Kit Item No.: 4512098 Bar Code: 4006825646986 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



18V 4,0Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



2x 18V 4,0Ah PXC-Twinpack Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack Battery Item No.: 4511518 Bar Code: 4006825651676 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

# **Battery-Running-Times**

One Battery for All	trimming <sup>1</sup>
	(min.)
1.5 Ah	20
2.0 Ah	25
2.5 Ah	33
3.0 Ah	45
4.0 Ah	55
5.2 Ah	65
6.0 Ah	75

Test setup: