



# Einhell

## EXPERT

### POWER X-CHANGE

Cordless Grass- and Bush Shear

**GE-CG 18/100 Li T-Solo**

**Item No.: 3410310**

Ident No.: 21010

Bar Code: 4006825652109

The Einhell GE-CG 18/100 Li T-Solo cordless grass and shrub shears is a high-performance member of the clever Power X-Change family. The grass cutting blade is perfectly suited for cutting lawn edges (100mm), as are the laser-cut and diamond-ground shrub shears blades for bushes and hedges (200mm). No additional tools are needed for changing the tools. The soft grip provides a perfect grip and ergonomics during use. The product is supplied complete with a telescopic extension for enhanced ergonomics. The covered gearing housing provides protection against accidental contact with the gear oil. One 18 V PXC battery is needed for operation. The battery and charger are not included in the scope of this delivery – they are available separately.

## Features & Benefits



- Member of the Power X-Change family, 1x18V batteries necessary
- Covered gearbox protecting customer to get in touch with gear oil
- Grass cutting blade used for perfect cutting result on edges
- Shrub shears blade for hedge and bush care
- Easy blade change without tools
- Laser-cut and diamond grinded blades
- Incl. telescopic-tube for extra ergonomic operation
- Soft grip ensuring perfect grip and ergonomics
- Supplied without battery and charger (available separately)

## Technical Data

- Cutting width with grass shear knife 100 mm
- Cutting length with shrub cutting knife 200 mm
- Cutting thickness with shrub cutting knife 8 mm
- Spacing between teeth of shrub cutting knife 8 mm

## Logistic Data

- Product weight 0.7
- Gross weight single packaging 2.85 kg
- Dimensions single packaging 935 x 190 x 133 mm
- Pieces per export carton 4 Pieces
- Gross weight export carton 11.43 kg
- Dimensions export carton 945 x 395 x 284 mm
- Container quantity (20"/40"/40"HC) 952 | 1960 | 2240

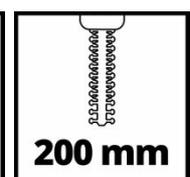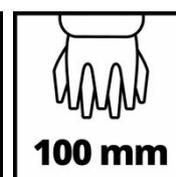

## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



2x 3,0Ah & 30min PXC Kit  
PXC-Starter-Kit  
Item No.: 4512098  
Bar Code: 4006825646986  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 3,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512041  
Bar Code: 4006825613698  
Einhell Accessory



18V 4,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory

## Battery-Running-Times

One Battery for All	 trimming <sup>1</sup> (min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720

Test setup:

1) -