







**Cordless Grass- and Bush Shear** 

**GE-CG 18 Li-Solo** 

Item No.: 3410370

Ident No.: 11016

Bar Code: 4006825614213

The cordless grass and shrub shears GE-CG 18 Li - Solo from Einhell is the ideal partner for hobby gardeners who appreciate flexibility when it comes to keeping their greeneries in shape. For optimum power transmission to the laser-cut and diamond grinded blades there is a robust metal gearing. A grass cutting blade and a shrub shears blade are included. Converting from the grass shears to the shrub shears is quick and easy to do thanks to the special blade change system which requires no tools. A safety switch protects the user from starting the shears unintentionally. The GE-CG 18 Li comes with a soft grip for a firm and yet comfortable hold. This product comes without a battery or charger.

## Features & Benefits

- Safety switch
- Metal gearing
- Grass cutting blade
- Shrub shears blade
- Blade change without tools
- Laser-cut and diamond grinded blades
- Supplied without battery and charger (available separately)

## **Technical Data**

- Cutting width with grass shear knife 100 mm - Cutting length with shrub cutting knife 200 mm - Cutting thickness with shrub cutting 8 mm knife

- Spacing between teeth of shrub cutting 8 mm knife

## **Logistic Data**

- Product weight 0.66 - Gross weight single packaging 1.26 kg

- Dimensions single packaging 355 x 115 x 120 mm

- Pieces per export carton 6 Pieces - Gross weight export carton 8.7 kg

370 x 360 x 260 mm - Dimensions export carton - Container quantity (20"/40"/40"HC) 4320 | 9216 | 10368





















## Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395

Bar Code: 4006825610369 Einhell Accessory



18V 4,0Ah Power X-Change Battery Item No.: 4511396

Bar Code: 4006825610376 **Einhell Accessory** 

18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

Power X-Twincharger 3A Charger Item No.: 4512069

Bar Code: 4006825629729 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437





Bar Code: 4006825616606 **Einhell Accessory** 

18V 3,0 Ah Power-X-Change Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

**Battery-Running-Times** 

One Battery for All	trimming <sup>1</sup>
	(min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720

Test setup:

1) -