







Cordless Surface Brush

PICOBELLA

Item No.: 3424200

Ident No.: 11019

Bar Code: 4006825645767

The Einhell PICOBELLA cordless surface brush is a multifunctional supporter to clean stone, wood, artificial turf and edges. As a member of the Power X-Change rechargeable battery system, every system rechargeable battery can be used. The PICOBELLA has an integrated garden hose connection incl. water control valve, an all-round dirt guard hood, extra-wide rotating brush rollers, flexible forward/reverse operation and infinitely adjustable speed control. The brushes can be changed at the press of a button. A special side brush is perfectly suited for perimeter work. The additional handle has an integrated garden hose guide. The product is supplied complete with a MEDIUM brush for cleaning stone. This product comes without battery or charger.

Features & Benefits

- Member of the Power X-Change family
- Multifunctional: Cleaning of stone, wood, artificial turf & edges
- Only one working step thanks integrated garden hose connection
- Economical use of water by manually regulation possibility
- Brush change without tools at the push of a button
- Special side brush for cleaning right to the wall and into edges
- Extra wide rotating brush for fast cleaning results
- Max. results thanks flexible forward-/reverse running of brush
- Height adjustable aluminium tube enables back-friendly work
- Steplessly adjustable speed control for additional flexibility
- Surrounding protection cover as perfect splash guard
- Additional handle with integrated garden hose routing
- Brush MEDIUM for stone cleaning included in delivery
- Ergonomic main handle with softgrip
- Supplied without battery and charger (available separately)

Technical Data

18 V - Voltage

800 - 1400 min^-1 - Rotation speed

- Diameter of brush 115 mm - Working width (brush MEDIUM) 215 mm

Logistic Data

- Product weight (kg) 4.1 - Gross weight (kg) 5.6

- Dimensions single packaging 1150 x 250 x 215 mm

- Pieces per export carton 2 Pieces - Gross weight of export carton 10 kg

- Dimensions export carton 1170 x 270 x 320 mm - Container quantity (20"/40"/40"HC) 572 | 1144 | 1304





















Available as special accessories



Bürste MEDIUM (Stein) Surface Brush Accessory Item No.: 3424120 Bar Code: 4006825646245





Brush ULTRA (Stone) Surface Brush Accessory Item No.: 3424122 Bar Code: 4006825646269 **Einhell Accessory**



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 **Einhell Accessory**



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502

Bar Code: 4006825644210 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



18V 3,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512041 Bar Code: 4006825613698 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437

Bar Code: 4006825616606

Einhell Accessory



Bürste SOFT (Holz, Kunstrasen) Surface Brush Accessory Item No.: 3424121 Bar Code: 4006825646252 Einhell Accessory



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 **Einhell Accessory**



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



18V 4,0Ah Power X-Change Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 4,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

Battery-Running-Times

One Battery for All	cleaning ¹ (min.)	cleaning² (min.)
1.5 Ah	25	8
2.0 Ah	30	10
2.5 Ah	34	12
3.0 Ah	46	17
4.0 Ah	55	20
5.2 Ah	70	25
6.0 Ah	90	29

Test setup:

- 1) Min. electronic speed
- 2) Max. electronic speed