



Einhell

EXPERT

POWER X-CHANGE

Cordless Pruning Shears

GE-LS 18 Li-Solo

Item No.: 3408300

Ident No.: 21010

Bar Code: 4006825652727

The Einhell GE-LS 18 Li- Solo cordless branch shears is a high-performance member of the flexible Power X-Change family. The branch shears is suitable for cutting branches up to 28 millimeters thick. Its high-grade bypass blades are designed for efficient cutting performance. A belt clip lets you carry the cordless branch shears in total comfort even when working high up in the trees. The branch shears comes with a safety switch and an ergonomic handle with Softgrip. Safe storage is assured by an On/Off sliding switch to activate/deactivate the shears and a rugged plastic cover. This product comes without a Power X-Change battery or charger which are available separately.

Features & Benefits

- A member of the Power X-Change family
- For powerful cutting of branches with a thickness up to 28 mm
- High-quality bypass blades for efficient cutting work
- Fosters growth thanks to clean and sharp cutting results
- Belt clip for optimum carrying comfort even at higher tree levels
- Safety switch for safety while using the shears
- On/Off sliding switch for activating/deactivating the shears
- Sturdy plastic cover for the blade for safe storage
- Effortless and easy change of blade possible
- Handy operation thanks to the ergonomic handle with soft grip
- Supplied without battery or charger (available separately)



Technical Data

- Cutting width 28 mm

Logistic Data

- Product weight (kg) 0.86
- Gross weight (kg) 1.08
- Dimensions single packaging 380 x 70 x 115 mm
- Pieces per export carton 8 Pieces
- Gross weight of export carton 9.2 kg
- Dimensions export carton 395 x 300 x 250 mm
- Container quantity (20"/40"/40"HC) 6976 | 14144 | 15912



Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x 3,0Ah & 30min PXC Kit
PXC-Starter-Kit
Item No.: 4512098
Bar Code: 4006825646986
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 3,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512041
Bar Code: 4006825613698
Einhell Accessory



18V 4,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory

Battery-Running-Times

One Battery for All	 cutting ¹ (pieces)
1.5 Ah	1070
2.0 Ah	1426
2.5 Ah	1783
3.0 Ah	2139
4.0 Ah	2852
5.2 Ah	3708
6.0 Ah	4278

Test setup:

1) round dry beech wood Ø 15 mm