



# Einhell

## CLASSIC



CI Pole-Mounted Powered Pruner

**GC-LC 18/20 Li T-Solo**

**Item No.: 3410581**

Ident No.: 21010

Bar Code: 4006825652123

The Einhell GC-LC 18/20 Li T-Solo cordless pole-mounted pruner is a member of the Power X-Change series. The product is supplied without a battery or charger which are available separately. The pole-mounted pruner is equipped with a high-quality OREGON rail and chain, a chain catch bolt and a durable metal gear unit and a metal claw stop. The oil reservoir provides automatic chain lubrication. The motor head has a 30° tilt angle and in combination with the extension pole the pole-mounted pruner can be used with flexibility. The additional rubberized holding area provides for ergonomic handling, and the pruner also has a harness.

## Features & Benefits

 
- Motor head with 30° tilt angle
- Extension pole for reaching higher branches
- Additional rubberized holding area for ergonomic handling
- OREGON high-quality rail and chain
- Metal gearing for long life
- Claw stop made of metal
- Chain catch bolt
- Carrying belt
- Oil tank for automatic chain lubrication

## Technical Data


- Sword length	200 mm
- Cutting length	195 mm
- Cutting speed	5.5 m/s
- Capacity of oil tank	70 mL
- Length of telescope bar	228 - 288 cm

## Logistic Data

- Product weight	3 kg
- Gross weight single packaging	5.5 kg
- Dimensions single packaging	1135 x 255 x 130 mm
- Pieces per export carton	3 Pieces
- Gross weight export carton	17 kg
- Dimensions export carton	1145 x 395 x 265 mm
- Container quantity (20"/40"/40"HC)	672   1392   1734

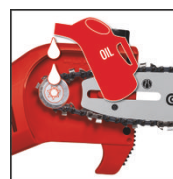

 FITTED WITH  
**OREGON**  
CHAIN AND BAR

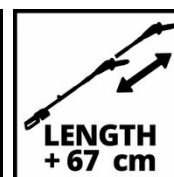

## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 3,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512041  
Bar Code: 4006825613698  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x 3,0Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512083  
Bar Code: 4006825638509  
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210  
Einhell Accessory



2x 3,0Ah & 30min PXC Kit  
PXC-Starter-Kit  
Item No.: 4512098  
Bar Code: 4006825646986  
Einhell Accessory



18V 4,0Ah Power X-Change  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 4,0Ah PXC Starter Kit TP  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory




18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Ersatzkette 20cm 1,1 33T 3/8  
Chain Saw Accessory  
Item No.: 4500187  
Bar Code: 4006825615463  
Einhell Grey

## Battery-Running-Times

One Battery for All	 cutting <sup>1</sup> (pieces)
1.5 Ah	37
2.0 Ah	50
2.5 Ah	65
3.0 Ah	75
4.0 Ah	100
5.2 Ah	130
6.0 Ah	155

For best performance select a battery with at least 2.5 Ah

Test setup:

1) softwood - scantling 70x70 mm