



Einhell

CLASSIC



Cordless Jig Saw

TC-JS 18 Li (1x2,5 Ah)

Item No.: 4321228

Ident No.: 21011

Bar Code: 4006825661804

Features & Benefits


- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- Integrated plastic sliding element for sensitive workpieces
- Incl. 3x wood sawblade and 2x metal sawblade
- Incl. charger and 2.5 Ah Power-X-Change battery
- Supplied in practical transport and storage case E-Box Basic S35

Technical Data

- | | |
|-----------------------------------|--------------------------|
| - Accumulator | 18 V 2500 mAh Li-Ion |
| - Charging time | 50min |
| - Mains supply of battery charger | 200-250 V 50-60 Hz |
| - Number of strokes | 2700 min ⁻¹ |
| - Stroke height | 20 mm |
| - Cutting depth in wood | 70 mm |
| - Cutting depth in plastic | 10 mm |
| - Cutting depth in steel | 8 mm |
| - Max. bevel cuts | 45 ° |
| - Toolless saw blade change | yes |
| - Number of accumulators | 1 Pieces |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight | 2.12 kg |
| - Gross weight single packaging | 3.76 kg |
| - Dimensions single packaging | 350 x 342 x 104 mm |
| - Pieces per export carton | 4 Pieces |
| - Gross weight export carton | 16.5 kg |
| - Container quantity (20"/40"/40"HC) | 1814 3758 4406 |

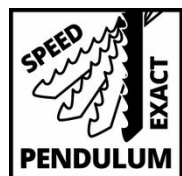

Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah Power X-Change
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory

18V 4,0Ah PXC Starter Kit 2
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 2
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory