



# Einhell

# EXPERT



**Cordless Jig Saw**

**TE-JS 18 Li-Solo**

**Item No.: 4321200**

Ident No.: 11025

Bar Code: 4006825601398

The TE-JS 18 Li – Solo cordless jigsaw is a powerful tool for diverse sawing jobs. The selectable pendulum action and very smooth operation enable fast and precise cuts. The universal blade holder without tools saves valuable time, while the integrated plastic sliding element protects sensitive workpieces. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.

## Features & Benefits

- Member of the Power X-Change family
- Very smooth operation for exact cutting
- Selectable pendulum action for fast cutting
- Universal blade holder without tools
- Includes dust blow-off function for optimum visibility
- LED light to illuminate the cutting area
- Integrated plastic sliding element for sensitive workpieces
- Additional attachable cutting line guide for exact cutting
- Complete with chip guard for cuts without splintering
- Supplied without battery and charger (available separately)






## Technical Data

- Number of strokes	2400 min <sup>-1</sup>
- Stroke height	25.4 mm
- Cutting depth in wood	80 mm
- Cutting depth in plastic	12 mm
- Cutting depth in steel	10 mm
- Max. bevel cuts	47 °
- Toolless saw blade change	yes

## Logistic Data

- Product weight	1.75 kg
- Gross weight single packaging	2.29 kg
- Dimensions single packaging	235 x 90 x 225 mm
- Pieces per export carton	5 Pieces
- Gross weight export carton	11.9 kg
- Container quantity (20"/40"/40"HC)	4575   9480   11115

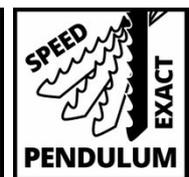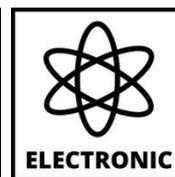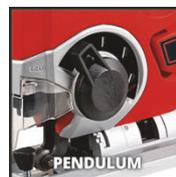

## Available as special accessories



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 2,0Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V 4,0Ah Power X-Change 1  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



18V 5,2Ah Power X-Change Plus  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 3,0 Ah Power-X-Change  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory

18V 4,0Ah PXC Starter Kit 2  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory

## Battery-Running-Times

One Battery for All	 sawing <sup>1</sup> (m)
1.5 Ah	7
2.0 Ah	9.5
2.5 Ah	11
3.0 Ah	14
4.0 Ah	20
5.2 Ah	30
6.0 Ah	32

Test setup:

1) -