



EXPERT

Cordless Pruning Shears

GE-LS 18 Li-Solo

Item No.: 3408300 Ident No.: 21021 Bar Code: 4006825652727

The Einhell GE-LS 18 Li-Solo cordless branch shears is a high-performance member of the flexible Power X-Change family. The branch shears is suitable for cutting branches up to 28 millimeters thick. Its high-grade bypass blades are designed for efficient cutting performance. A belt clip lets you carry the cordless branch shears in total comfort even when working high up in the trees. The branch shears comes with a safety switch and an ergonomic handle with Softgrip. Safe storage is assured by an On/Off sliding switch to activate/deactivate the shears and a rugged plastic cover. This product comes without a Power X-Change battery or charger which are available separately.

Features & Benefits

- Member of the Power X-Change family, 1x18V battery necessary
- For powerful cutting of branches with a thickness up to 28 mm
- High-quality bypass blades for efficient cutting work
- Fosters growth thanks to clean and sharp cutting results
- Belt clip for optimum carrying comfort even at higher tree levels
- Safety switch for safety while using the shears
- On/Off sliding switch for activating/deactivating the shears
- Sturdy plastic cover for the blade for safe storage
- Effortless and easy change of blade possible
- Handy operation thanks to the ergonomic handle with soft grip
- Supplied without battery and charger (available separately)

Technical Data

- Cutting width

28 mm

Logistic Data

- Product weight (kg)	0.8
- Gross weight (kg)	1.05
- Dimensions single packaging	380 x 115 x 70 mm
- Pieces per export carton	8 Pieces
- Gross weight of export carton	9.2 kg
- Dimensions export carton	395 x 300 x 250 mm
- Container quantity (20"/40"/40"HC)	6976 14144 15912







Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory

Item No.: 4511395

Battery





18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory

18V 2,0Ah Power X-Change

Bar Code: 4006825610369 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory





2x18V 4,0Ah PXC-Twinpack CB 2 Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory

18V 4,0Ah Power X-Change 2 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory









Einhell Accessory Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory

Power X-Twincharger 3A

Charger

Bar Code: 4006825649536

2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083

Bar Code: 4006825638509

18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097

Bar Code: 4006825646962

2x2 Power X-Quattrocharger 4A

Einhell Accessory

Einhell Accessory

Charger Item No.: 4512102









Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory 18V 4,0Ah PXC Starter Kit 2 PXC-Starter-Kit

18V 4,0Ah PXC Starter Kit 2 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

Battery-Running-Times

One Battery for All	cutting ¹	
	(pieces)	
1.5 Ah	1070	
2.0 Ah	1426	
2.5 Ah	1783	
3.0 Ah	2139	
4.0 Ah	2852	
5.2 Ah	3708	
6.0 Ah	4278	

Test setup:

1) round dry beech wood Ø 15 mm