







TE-CS 18/150 Li - Solo

Item No.: 4331220

Ident No.: 21021

Bar Code: 4006825647532

The Einhell cordless TE-CS 18/150 Li-Solo handheld circular saw is compact, light and easy to work with, and it is a member of the Einhell Power X-Change family. The high-performance lithium-ion batteries are used in all Power X-Change products. You can adjust the cutting depth and tilt angle on the hand-held circular saw without any tools. A spindle lock makes it easy to swap sawblades with a 10 mm or 16 mm bore. High-quality LEDs and a dust vacuum attachment give you a clear view of what you are doing and keep the work area clean. The TE-CS 18/150 Li-Solo is compatible with the Einhell guide rail which is available separately. The saw is supplied without a battery and charger which are available separately.

OWER X-CHANGE

Features & Benefits

- A member of the Power X-Change family
- Small, light and handy for comfortable operation
- Easy adjustment without tools (cutting depth, tilt angle)
- Dust extractor adapter to keep the workplace clean
- Compatible with the Einhell guide rail
- Easy changing of the saw blade thanks to the spindle lock
- High quality aluminium base plate
- Sawblades with 10mm or 16mm core can be used
- High quality sawblade is included in delivery
- High-quality LED for optimum illumination of the cutting area
- Supplied without battery and charger (available separately)

Technical Data

- No-load speed 4200 min^-1 - Saw Blade Ø150 x Ø10 mm - Number of saw teeth 18 Pieces - Cutting depth at 90° 48 mm - Cutting depth at 45° 32 mm

Logistic Data

- Product weight 2.45 kg - Gross weight single packaging 3.39 kg

- Dimensions single packaging 316 x 200 x 286 mm

- Pieces per export carton 2 Pieces - Gross weight export carton 7.5 kg

- Dimensions export carton 420 x 335 x 310 mm - Container quantity (20"/40"/40"HC) 1280 | 2654 | 3112



















Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 4,0Ah Power X-Change 2 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



Guide Rail Alu 2x1000mm Circular Saw Accessory Item No.: 4502118 Bar Code: 4006825632675 Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



18V 4,0Ah PXC Starter Kit 2 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory

Battery-Running-Times

One Battery for All	cutting ¹
	(m)
1.5 Ah	25
2.0 Ah	33
2.5 Ah	40
3.0 Ah	49
4.0 Ah	64
5.2 Ah	82
6.0 Ah	98

Test setup:

1) -