







GC-CG 18 Li-Solo

Item No.: 3410370

Ident No.: 21021

Bar Code: 4006825614213

POWER -CHANGE

The cordless grass and shrub shears GC-CG 18 Li - Solo from Einhell is the ideal partner for hobby gardeners who appreciate flexibility when it comes to keeping their greeneries in shape. For optimum power transmission to the laser-cut and diamond grinded blades there is a robust metal gearing. A grass cutting blade and a shrub shears blade are included. Converting from the grass shears to the shrub shears is quick and easy to do thanks to the special blade change system which requires no tools. A safety switch protects the user from starting the shears unintentionally. The GC-CG 18 Li comes with a soft grip for a firm and yet comfortable hold. This product comes without a battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Metal gearing long lifetime
- Grass cutting blade for maintaining of lawn edges
- Shrub shears blade for maintaining hedges, bushes & beech trees
- Blade change without tools easy and quick
- Laser-cut and diamond grinded blades
- Soft grip ensuring perfect grip
- Supplied without battery and charger (available separately)

Technical Data

Cutting width with grass shear knife
Cutting length with shrub cutting knife
Cutting thickness with shrub cutting
8 mm

- Spacing between teeth of shrub cutting 8 mm knife

Logistic Data

- Product weight 0.67- Gross weight single packaging 1.35 kg

- Dimensions single packaging 355 x 115 x 120 mm

- Pieces per export carton- Gross weight export carton8.7 kg

- Dimensions export carton 370 x 360 x 260 mm - Container quantity (20"/40"/40"HC) 4320 | 9216 | 10368





















Available as special accessories



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210

Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 2 Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory



18V 4,0Ah PXC Starter Kit 2 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



18V 4,0Ah Power X-Change 2 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

Battery-Running-Times

One Battery for All	trimming ¹
	(min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	360
4.0 Ah	480
5.2 Ah	650
6.0 Ah	720

Test setup: