



Einhell

PROFESSIONAL



Top-handled Cordless Chain Saw

FORTEXXA 18/20 TH

Item No.: 4600020

Ident No.: 21011

Bar Code: 4006825663099

The Einhell FORTEXXA 18/20 TH top-handled cordless chainsaw is a member of the Power X-Change family. This chainsaw is powered by a brushless electric motor; it comes equipped with a high-quality OREGON rail and chain and has a tool-less chain tensioning + changing facility. **WARNING:** This chainsaw may only be used by fully trained tree care personnel. Use without training could lead to serious injuries. This product comes without a battery (2.5 Ah recommended) or charger.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Einhell Brushless Motor
- High-quality chain and bar from OREGON
- Ideal for trimming and tree care
- Tip guard for prevention of kickback
- Kickback protection with instant chain brake
- Toolless chain tensioning and changing
- Handy, light and ergonomic
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain lubrication
- Chain catcher
- Top-handled chainsaw for fully trained tree care personnel
- Recommendation for optimum results: 2.5 Ah rechargeable battery
- Supplied without battery and charger (available separately)



Technical Data

- Sword length	200 mm
- Max. cutting length	140 mm
- Chain cutting speed	7 m/s
- Oil tank capacity	75 mL

Logistic Data

- Product weight (kg)	2.54
- Gross weight (kg)	3.13
- Dimensions single packaging	291 x 248 x 210 mm
- Pieces per export carton	4 Pieces
- Gross weight of export carton	13.5 kg
- Dimensions export carton	335 x 240 x 210 mm
- Container quantity (20"/40"/40"HC)	1440 2980



Available as special accessories



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 2
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah Power X-Change 2
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Ersatzschwert 20cm 1,1
Chain Saw Accessory
Item No.: 4500194
Bar Code: 4006825664560
Einhell Accessory



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



18V 4,0Ah PXC Starter Kit 2
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Ersatzkette 20cm 1,1 33T 3/8
Chain Saw Accessory
Item No.: 4500193
Bar Code: 4006825664577
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times



sawing¹
(pieces)

One Battery for All

1.5 Ah	60
2.0 Ah	80
2.5 Ah	100
3.0 Ah	120
4.0 Ah	160
5.2 Ah	210
6.0 Ah	240

For best performance select a battery with at least 2.5 Ah

Test setup:

1) wood - scantling 70x70 mm