



# Einhell

# EXPERT

## POWER X-CHANGE

Robot Lawn Mower

**FREELEXO 500 BT**

Item No.: 4326363

Ident No.: 21031

Bar Code: 4006825653496

The Einhell FREELEXO 500 BT robot lawnmower is a member of the high-performance Power X-Change family which provides unlimited flexibility within the system family. It is controlled via app by Bluetooth and the settings of the robot lawnmower can be set to individual requirements. In addition, it has an intuitive keypad. Using the app the operating time of the Einhell FREELEXO can be precisely programmed for each specific day. The FREELEXO 500 BT includes everything needed for installation and operation of an Einhell robotic lawnmower of the FREELEXO Series. It is suitable for a lawns up to 500 m<sup>2</sup> and includes a 2,5 Ah battery, 130 m wire, 190 fastening hooks, 3 blades and 4 connecting clamps.

## Features & Benefits

- PXC system battery - can also be used for other PXC products
- App using Bluetooth - user-defined robot lawnmower control
- Multi area mowing - for complex gardens
- Intuitive keypad
- Programmable operating time for each specific day
- Safety sensor system thanks to impact, tilt and lift sensors
- Anti-theft protection in form of PIN code and warning signal
- Rain sensor
- Cutting height adjustment (20-60mm)
- Suitable for slopes up to 35%
- Carry-handle for comfortable transport
- Automatic return to charging unit and charging
- Lawn areas up to 500 m<sup>2</sup>
- Incl. 2,5 Ah PXC Battery
- Wire 130 m
- Fastening hooks 190 pcs.
- Blades 3 pcs.
- Connecting clamps 4 pcs.



## Technical Data

|                             |                          |
|-----------------------------|--------------------------|
| - Power                     | 18 V                     |
| - Battery                   | 18 V   2500 mAh   Li-Ion |
| - Cutting width             | 18 cm                    |
| - Slope                     | 35 %                     |
| - Cutting height adjustment | 20 mm - 60 mm            |
| - Recommended area          | 500 m <sup>2</sup>       |
| - Perimeter wire            | 130 m                    |
| - Hooks                     | 190 Pieces               |
| - Spare blades              | 3                        |
| - Connecting clamps         | 4 Pieces                 |



FREELEXO

## Logistic Data

|  |                    |
|--|--------------------|
| - Product weight (kg)                  | 14.46              |
| - Gross weight (kg)                    | 18                 |
| - Dimensions single packaging          | 722 x 528 x 325 mm |
| - Pieces per export carton             | 1 Pieces           |
| - Gross weight of export carton        | 18.1 kg            |
| - Dimensions export carton             | 737 x 530 x 327 mm |
| - Container quantities (20"/40"/40"HC) | 224   462   528    |



## Available as special accessories

|   |   |   |  |
|---|---|---|--|
|    | <p>Power X-Boostcharger 6A<br/>Charger<br/>Item No.: 4512064<br/>Bar Code: 4006825629019<br/>Einhell Accessory</p>                    |    | <p>2x 3,0Ah &amp; Twincharger Kit<br/>PXC-Starter-Kit<br/>Item No.: 4512083<br/>Bar Code: 4006825638509<br/>Einhell Accessory</p>    |
|    | <p>18V 4-6Ah Multi-Ah PXC Plus<br/>Battery<br/>Item No.: 4511502<br/>Bar Code: 4006825644210<br/>Einhell Accessory</p>                |    | <p>18V 2,5Ah PXC Starter Kit<br/>PXC-Starter-Kit<br/>Item No.: 4512097<br/>Bar Code: 4006825646962<br/>Einhell Accessory</p>         |
|    | <p>Installation Kit 500m2<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414010<br/>Bar Code: 4006825646863<br/>Einhell Accessory</p>  |    | <p>Installation Kit 800m2<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414011<br/>Bar Code: 4006825646870<br/>Einhell Accessory</p> |
|    | <p>Installation Kit 1200m2<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414012<br/>Bar Code: 4006825646887<br/>Einhell Accessory</p> |    | <p>18V 2,0Ah Power X-Change<br/>Battery<br/>Item No.: 4511395<br/>Bar Code: 4006825610369<br/>Einhell Accessory</p>                  |
|    | <p>18V 4,0Ah Power X-Change 1<br/>Battery<br/>Item No.: 4511396<br/>Bar Code: 4006825610376<br/>Einhell Accessory</p>                 |    | <p>18V 4,0Ah PXC Starter Kit 1<br/>PXC-Starter-Kit<br/>Item No.: 4512042<br/>Bar Code: 4006825613704<br/>Einhell Accessory</p>       |
|    | <p>Spare blades 12 psc<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414020<br/>Bar Code: 4006825648775<br/>Einhell Accessory</p>     |    | <p>Perimeter wire 50 m<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414021<br/>Bar Code: 4006825648782<br/>Einhell Accessory</p>    |
|  | <p>Connecting clamps 4 psc<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414022<br/>Bar Code: 4006825648799<br/>Einhell Accessory</p> |  | <p>Fastening hook 100 psc<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414023<br/>Bar Code: 4006825648805<br/>Einhell Accessory</p> |
|  | <p>2x2 Power X-Quattrocharger 4A<br/>Charger<br/>Item No.: 4512102<br/>Bar Code: 4006825649536<br/>Einhell Accessory</p>              |  | <p>18V 2,5Ah Power X-Change<br/>Battery<br/>Item No.: 4511516<br/>Bar Code: 4006825650518<br/>Einhell Accessory</p>                  |
|  | <p>Power X-Fastcharger 4A<br/>Charger<br/>Item No.: 4512103<br/>Bar Code: 4006825650228<br/>Einhell Accessory</p>                     |  | <p>18V 5,2Ah Power X-Change Plus<br/>Battery<br/>Item No.: 4511437<br/>Bar Code: 4006825616606<br/>Einhell Accessory</p>             |
|  | <p>2x 5,2Ah &amp; Twincharger Kit<br/>PXC-Starter-Kit<br/>Item No.: 4512108<br/>Bar Code: 4006825652376<br/>Einhell Accessory</p>     |  | <p>Power X-Twincharger 3A<br/>Charger<br/>Item No.: 4512069<br/>Bar Code: 4006825629729<br/>Einhell Accessory</p>                    |
|  | <p>robot lawn mower garage<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414024<br/>Bar Code: 4006825654417<br/>Einhell Accessory</p> |  | <p>18V Battery Charger 3,0A - PXC<br/>Charger<br/>Item No.: 4514095<br/>Bar Code: 4006825655292<br/>Einhell Accessory</p>            |
|  | <p>Power X-Car Charger 3A<br/>Charger<br/>Item No.: 4512113<br/>Bar Code: 4006825655377<br/>Einhell Accessory</p>                     |  | <p>2x 4,0Ah &amp; Twincharger Kit<br/>PXC-Starter-Kit<br/>Item No.: 4512112<br/>Bar Code: 4006825655766<br/>Einhell Accessory</p>    |
|  | <p>2x 18V 2,5Ah PXC-Twinpack CB<br/>Battery<br/>Item No.: 4511524<br/>Bar Code: 4006825656206<br/>Einhell Accessory</p>               |  | <p>2x 18V 5,2Ah PXC-Twinpack<br/>Battery<br/>Item No.: 4511526<br/>Bar Code: 4006825656695<br/>Einhell Accessory</p>                 |
|  | <p>5,2Ah &amp; 4A Fastcharger<br/>PXC-Starter-Kit<br/>Item No.: 4512114<br/>Bar Code: 4006825656787<br/>Einhell Accessory</p>         |  | <p>Cleaning Kit<br/>Robot Lawn Mower Accessory<br/>Item No.: 3414025<br/>Bar Code: 4006825657951<br/>Einhell Accessory</p>           |



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



18V 2,0Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 3,0Ah Power X-Change Plus  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory