



Einhell

EXPERT



Cordless All Purpose Saw

TE-AP 18/22 Li-Solo

Item No.: 4326300

Ident No.: 21031

Bar Code: 4006825601381

The TE-AP 18/22 Li – Solo cordless universal saw is the smallest saw of its class and a versatile tool which demonstrates its strong points on a wide spectrum of sawing jobs, whether at construction site, in the workshop or in the garden. This particularly light and handy saw is equipped with a unique Triathlon motor for providing excellent power, speed and efficiency. The tool is supplied without battery and charger but it can be powered by Power X-Change rechargeable batteries.

Features & Benefits

- Member of the Power X-Change family
- Versatile: Building site - workshop - garden
- The smallest universal saw of its class
- Unique Triathlon motor (powerful, fast, efficient)
- Blade change without tools
- Adjustable soleplate for optimum blade use
- Ergonomic softgrip surfaces
- Rubber supports to protect the housing
- Supplied without battery and charger (available separately)
- Incl. saw blade for wood




Technical Data

- | | |
|-----------------------------|----------------------------|
| - Number of strokes | 0 - 2600 min ⁻¹ |
| - Stroke height | 22 mm |
| - Cutting depth in wood | 100 mm |
| - Cutting depth in steel | 6 mm |
| - Toolless saw blade change | yes |



Logistic Data

- | | |
|--------------------------------------|---------------------|
| - Product weight | 1.6 kg |
| - Gross weight single packaging | 2.02 kg |
| - Dimensions single packaging | 415 x 80 x 165 mm |
| - Pieces per export carton | 6 Pieces |
| - Gross weight export carton | 12.5 kg |
| - Dimensions export carton | 430 x 260 x 352 mm |
| - Container quantity (20"/40"/40"HC) | 4260 8520 10200 |

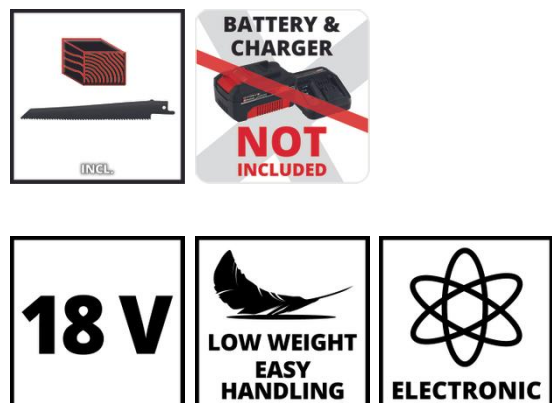

Available as special accessories



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Sabersaw-bl. set 3pc W/M Batt
All Purpose Saw Accessory
Item No.: 49576105
Bar Code: 4009315761053
KWB by Einhell



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory