



Cordless Chain Saw

GP-LC 36/35 Li-Solo

Item No.: 4501780 Ident No.: 21021

Bar Code: 4006825631920

The Einhell GP-LC 36/35 Li-Solo cordless chainsaw provides power and flexibility. It is a member of the Power X-Change family. Two 18 V PXC rechargeable batteries supply the Einhell brushless motor, a brushless electric motor, with power. Thanks to the high-quality OREGON guide bar and chain, it even cuts through larger trunks. The chain can be tensioned and changed without any tools. For safety there is a claw stop made of metal, kickback protection, instant-reaction chain brake and a chain catch bolt. The ergonomic softgrip makes the cordless chainsaw secure and comfortable to hold. The chain is lubricated automatically and a large opening is provided in the oil tank for topping up the oil. The batteries & charger are available separately

Features & Benefits

- Member of the Power X-Change family, 2x18 V batteries necessary
- TWIN-Pack technology: 2x18V Power X-Change batteries more power
- Brushless motor more power and longer running time
- Toolless chain tensioning and changing
- Robust OREGON quality sword and sharp chain
- Ergonomic handle with Softgrip
- Solid metal claw stop
- Automatic chain lubrication
- Oil reservoir with sight glass for automatic chain lubrication
- Kickback protection with instant chain brake
- Chain catch bolt
- Recommendation for optimum results: 2x3Ah battery & higher

4 kg

5.2 kg

2 Pieces

11.5 kg

260 x 500 x 252 mm

515 x 405 x 275 mm

976 | 1952 | 2196

- Supplied without battery and charger (available separately)

Technical Data

- Sword length	350 mm
- Max. cutting length	33 cm
- Chain cutting speed	15 m/s
- Oil tank capacity	115 mL

Logistic Data

- Product weight (kg)	
-----------------------	--

- Gross weight (kg)
- Dimensions single packaging
- Pieces per export carton
- Gross weight export carton
- Dimensions Export Carton
- Container quantity (20"/40"/40"HC)









Available as special accessories



Spare Bar 35cm 1,1 Chain Saw Accessory Item No.: 4500197 Bar Code: 4006825632248 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory

18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory







Einhell Accessory 18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

Spare Chain 35cm 1,27 52T 3/8 Chain Saw Accessory Item No.: 4500196 Bar Code: 4006825632231

18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396

18V 5,2Ah Power X-Change Plus

Bar Code: 4006825610376

Bar Code: 4006825616606

Einhell Accessory

Einhell Accessory

Battery Item No.: 4511437

18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

Battery-Running-Times

One Battery for All	sawing ¹ (pieces)
1.5 Ah	120
2.0 Ah	160
2.5 Ah	200
3.0 Ah	240
4.0 Ah	320
5.2 Ah	420
6.0 Ah	480

For best performance select a battery with at least 3.0 Ah

Test setup:

1) scantling 70x70 mm