



Einhell

EXPERT PLUS



Cordless Grout Cleaner

GC-CC 18 Li-Solo

Item No.: 3424050

Ident No.: 21021

Bar Code: 4006825615982

The Einhell GC-CC 18 Li Solo cordless paving scraper is a practical Power X-Change set for improving the appearance of the garden and extending the life of hard-surfaced areas. The brushes are replaceable, with a nylon brush and a steel brush supplied with this product. The telescopic long handle is infinitely adjustable to enable work to be performed standing upright. For even easier handling and accurate cleaning results there is an inf. adj. second handle. The Softgrip ensures that the user feels comfortable while working. All system batteries from the Power X-Change series can be used in the cordless paving scraper. Supplied without battery and without charger.

Features & Benefits

- Member of the Power X-Change family, 1x18V batteries necessary
- Dead man's safety switch
- Infinitely adjustable second handle
- Telescopic long handle, infinitely adjustable
- Replaceable brushes (1x nylon and 1x steel included)
- Guide wheel
- Soft grip
- Supplied without battery and charger (available separately)

Technical Data

- Diameter of brush 100 mm
- Idle speed 1200 min⁻¹

Logistic Data

- Product weight (kg) 2.04
- Gross weight (kg) 2.57
- Dimensions single packaging 835 x 200 x 120 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 12 kg
- Dimensions export carton 850 x 420 x 260 mm
- Container quantity (20"/40"/40"HC) 1024 | 2144 | 2412



ADDITIONAL HANDLE



ERGONOMIC HANDLE



SOFT GRIP



INCL. NYLON & STEEL BRUSH



EASY HANDLING




BATTERY & CHARGER

NOT INCLUDED



18 V

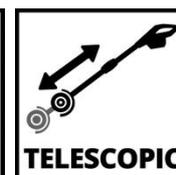

TELESCOPIC



INCL. NYLON & STEEL BRUSH

Available as special accessories



Spare Brush Steel GC-EG 1410
Grout Cleaner Accessory
Item No.: 3424100
Bar Code: 4006825569919
Einhell Accessory



Spare Brush Nylon GC-EG 1410
Grout Cleaner Accessory
Item No.: 3424110
Bar Code: 4006825569926
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Spare Brush Steel and Nylon
Grout Cleaner Accessory
Item No.: 3424115
Bar Code: 4006825660760
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



GC-CG 18 Li-Solo
Cordless Grass- and Bush Shear
Item No.: 3410370
Bar Code: 4006825614213
Einhell Expert Plus



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 cleaning ¹ (min.)	 cleaning ² (min.)
	1.5 Ah	30
2.0 Ah	45	45
2.5 Ah	50	50
3.0 Ah	60	60
4.0 Ah	90	90
5.2 Ah	120	120
6.0 Ah	135	135
8.0 Ah	180	180

Test setup:

1) nylon

2) metal