





Cordless Grout Cleaner

GC-CC 18 Li Kit (1x2,0Ah)

Item No.: 3424051

Ident No.: 21031

Bar Code: 4006825618396

The Einhell GC-CC 18 Li Kit cordless paving scraper is a practical Power X-Change set for improving the appearance of the garden and extending the life of hard-surfaced areas. The brushes are replaceable, with a nylon brush and a steel brush supplied with this product. The telescopic long handle is infinitely adjustable to enable work to be performed standing upright. For even easier handling and accurate cleaning results there is an inf. adj. second handle. The Softgrip ensures that the user feels comfortable while working. The Power X-Change system battery with LED charge indicator included in the scope of delivery can be used in all Power X-Change models and the supplied high-speed charger system can be used for all system batteries.

WER CHANGE

Features & Benefits

- Battery system Power X-Change
- Battery charge level indicator with 3 LEDs
- Batteries can be used for other Power X-Change products
- System high-speed chargers included
- Dead man's safety switch
- Infinitely adjustable second handle
- Telescopic long handle, infinitely adjustable
- Replaceable brushes (1x nylon and 1x steel included)
- Guide wheel
- Soft grip

Technical Data

- Diameter of brush 100 mm - Idle speed 1200 min^-1 - Accumulator 2000 mAh | Li-Ion

Logistic Data

- Product weight (kg) 2.4 3.7 - Gross weight (kg)

- Dimensions single packaging 855 x 200 x 120 mm

- Pieces per export carton 4 Pieces - Gross weight of export carton 15.4 kg

- Dimensions export carton 1000 x 420 x 280 mm 898 | 1728 | 2160 - Container quantity (20"/40"/40"HC)



















Available as special accessories



Spare Brush Steel GC-EG 1410 Grout Cleaner Accessory Item No.: 3424100 Bar Code: 4006825569919 Einhell Accessory



Spare Brush Nylon GC-EG 1410 Grout Cleaner Accessory Item No.: 3424110 Bar Code: 4006825569926 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369

Einhell Accessory



Bar Code: 4006825569926 Einhell Accessory 18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606

Bar Code: 4006825610376

Einhell Accessory

Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



Spare Brush Steel and Nylon Grout Cleaner Accessory Item No.: 3424115 Bar Code: 4006825660760 Einhell Accessory



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593

Einhell Accessory

Battery-Running-Times

One Battery for All	cleaning ¹	cleaning ²
One battery for All	(min.)	(min.)
1.5 Ah	30	30
2.0 Ah	45	45
2.5 Ah	50	50
3.0 Ah	60	60
4.0 Ah	90	90
5.2 Ah	120	120
6.0 Ah	135	135
8.0 Ah	180	180

Test setup:

1) nylon

2) metal