



Cordless Surface Brush

PICOBELLA

Item No.: 3424200

Ident No.: 21032

Bar Code: 4006825645767

The Einhell PICOBELLA cordless surface brush is a multifunctional supporter to clean stone, wood, artificial turf and edges. As a member of the Power X-Change rechargeable battery system, every system rechargeable battery can be used. The PICOBELLA has an integrated garden hose connection incl. water control valve, an all-round dirt guard hood, extra-wide rotating brush rollers, flexible forward/reverse operation and infinitely adjustable speed control. The brushes can be changed at the press of a button. A special side brush is perfectly suited for perimeter work. The additional handle has an integrated garden hose guide. The product is supplied complete with a MEDIUM brush for cleaning stone. This product comes without battery or charger.

Features & Benefits

- Member of the Power X-Change family
- Multifunctional: Cleaning of stone, wood, artificial turf & edges
- Only one working step thanks integrated garden hose connection
- Economical use of water by manually regulation possibility
- Brush change without tools at the push of a button
- Special side brush for cleaning right to the wall and into edges
- Extra wide rotating brush for fast cleaning results
- Max. results thanks flexible forward-/reverse running of brush
- Height adjustable aluminium tube enables back-friendly work
- Steplessly adjustable speed control for additional flexibility
- Surrounding protection cover as perfect splash guard
- Additional handle with integrated garden hose routing
- Brush MEDIUM for stone cleaning included in delivery
- Ergonomic main handle with softgrip
- Supplied without battery and charger (available separately)

Technical Data

- Voltage	18 V
- Rotation speed	800 - 1400 min^-1
- Diameter of brush	115 mm
- Working width (brush MEDIUM)	215 mm

4.1

5.6

2 Pieces

12.4 kg

1150 x 250 x 215 mm

1170 x 270 x 320 mm

572 | 1144 | 1304

Logistic Data

- Product weight (kg)
- Gross weight (kg)
- Dimensions single packaging
- Pieces per export carton
- Gross weight of export carton
- Dimensions export carton
- Container quantity (20"/40"/40"HC)



Illustrations can contain accessories, which are not included in standard extent of deliver Illustration similar (in design), production-wise modifications reserve GS mark belongs to the product itself only, excluded accessor Generated at: 17.08.2022 10:3 Page

Available as special accessories









Battery Item No.: 4511516 Bar Code: 4006825650518 **Einhell Accessory** 18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437

Einhell Accessory

Bar Code: 4006825616606

Power X-Car Charger 3A

2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083

Bar Code: 4006825638509

Brush MEDIUM (Stone) Surface Brush Accessory Item No.: 3424120

Brush ULTRA (Stone) Surface Brush Accessory

Bar Code: 4006825646269

18V 2,0Ah Power X-Change

Bar Code: 4006825610369 **Einhell Accessory**

18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

18V 2,5Ah Power X-Change

Bar Code: 4006825646245

Einhell Accessory

Einhell Accessory

Item No.: 3424122

Einhell Accessory

Battery Item No.: 4511395



Charger Item No.: 4512113 Bar Code: 4006825655377 **Einhell Accessory**

2x 18V 2,5Ah PXC-Twinpack CB Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory

 


5,2AII & 4A Fastonarger PXC-Starter-Kit Item No.: 4512114 Bar Code: 4006825656787 Einhell Accessory

5,2Ah & 4A Fastcharger



2x18V 4,0Ah PXC-Twinpack CB 1 Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory





18V 5-8Ah Multi-Ah PXC Plus Battery Item No.: 4511600 Bar Code: 4006825665055 **Einhell Accessory**



















2x 18V 5,2Ah PXC-Twinpack Battery Bar Code: 4006825656695





side brush ULTRA (stone) Surface Brush Accessory Item No.: 3424126 Bar Code: 4006825660845 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory

18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory

Brush SOFT (wood, artif. turf) Surface Brush Accessory Item No.: 3424121 Bar Code: 4006825646252 **Einhell Accessory**

18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 **Einhell Accessory**

18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory

2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory

Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory

Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 **Einhell Accessory**

2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit Item No.: 4512112 Bar Code: 4006825655766

Einhell Accessory

Item No.: 4511526 **Einhell Accessory**

PXC Akku-Wandhalterung

Case Item No.: 4514155 Bar Code: 4006825658774 Einhell Accessory



Battery-Running-Times

One Battery for All	cleaning ¹ (min.)	cleaning ² (min.)
1.5 Ah	25	8
2.0 Ah	30	10
2.5 Ah	34	12
3.0 Ah	46	17
4.0 Ah	55	20
5.2 Ah	70	25
6.0 Ah	90	29
8.0 Ah	110	40

Test setup:

1) nylon - Min. electronic speed

2) nylon - Max. electronic speed