







**Cordless Chain Sharpener** 

**GE-CS 18 Li-Solo** 

Item No.: 4499940

Ident No.: 21031

Bar Code: 4006825613858

The Einhell cordless GE-CS 18 Li - Solo Chainsaw Sharpener restores the cutting edge to your chainsaw and saves you money. Why buy an expensive new chain when you can re-sharpen the one you already have? The chainsaw sharpener is ideal for quickly sharpening standard chains without excessive abrasion. A depth stop protects the chain from excessive material removal. The angle gauge and chain tensioner ensure the chain is ideally positioned for fast, precision grinding. The sharpener is supplied without a battery and charger which are available separately.

#### **Features & Benefits**

- Member of the Power X-Change family, 1x18V batteries necessary
- Depth stop to reduce loss of material
- Scala for precise setting of the grinding angle
- Clamping device
- Incl. grinding wheel
- LED light for optimum illumination
- Supplied without battery and charger (available separately)

#### **Technical Data**

- Idle speed 6500 min^-1

## **Logistic Data**

- Product weight (kg) 1.68 - Gross weight (kg) 2.2

- Dimensions single packaging 285 x 220 x 170 mm

- Pieces per export carton 4 Pieces - Gross weight of export carton 10 kg

590 x 460 x 190 mm - Dimensions export carton 1940 | 3880 | 4728 - Container quantity (20"/40"/40"HC)





















## Available as special accessories



Grinding Disc 4,5 mm Accessory garden technique Item No.: 4500071 Bar Code: 4006825548853 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369

**Einhell Accessory** 



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



Grinding Disc Kit 3,2 mm Chain Sharpener Accessory Item No.: 4500076 Bar Code: 4006825548860 Einhell Accessory



18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

# **Battery-Running-Times**

	<u> </u>
One Battery for All	sanding <sup>1</sup>
	(min.)
1.5 Ah	180
2.0 Ah	240
2.5 Ah	300
3.0 Ah	390
4.0 Ah	480
5.2 Ah	660
6.0 Ah	780
8.0 Ah	960

Test setup:

1) -