



**Cordless Chain Saw** 

#### **FORTEXXA 18/30**

ltem No.: 4600010

Ident No.: 21010

Bar Code: 4006825656572

The Einhell FORTEXXA 18/30 cordless chainsaw is a member of the Power X-Change family. The chain saw is driven by a brushless electric motor, is equipped with an OREGON quality blade and chain and has a tool-free adjustable chain tension/change. The chain catcher and the kickback protection with instant chain brake ensure safety and the automatic chain lubrication via the large oil filling opening for care. The claw stop is made of metal, the ergonomic handle is equipped with softgrip. The chain speed is adjustable, it can be switched between full power and Eco mode. Delivery does not include battery or charger.

OWER X-CHANGE

### **Features & Benefits**

- Member of the Power X-Change family, 1x18V batteries necessary
- Einhell Brushless Motor
- High-quality chain and bar from OREGON
- Speed setting depending on the application
- Selection of HIGH power (8.9 m/s) and ECO power (6 m/s)
- Kickback protection with instant chain brake
- Toolless chain tensioning and changing
- Ergonomic handle with Softgrip
- Sturdy stop claws made of metal
- Big filler opening
- Automatic chain greasing
- Chain catcher
- Recommendation for optimum results: 4.0 Ah rechargeable battery

160 mL

- Supplied without battery and charger (available separately)

# **Technical Data**

- Sword length	300 mm
- Max. cutting length	27 cm
- Chain cutting speed	8.9 m/s

- Oil tank capacity

## Logistic Data

- Product weight (kg)	4.03 kg
- Gross weight (kg)	5.38 kg
- Dimensions single packaging	255 x 477 x 282 mm
- Pieces per export carton	4 Pieces
- Gross weight export carton	22.75 kg
- Dimensions Export Carton	580 x 500 x 535 mm
- Container quantity (20"/40"/40"HC)	656   1376   1720









#### Available as special accessories



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory

18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097

Bar Code: 4006825646962

18V 4,0Ah Power X-Change 1

Bar Code: 4006825610376

**Einhell Accessory** 

Item No.: 4511396

**Einhell Accessory** 

Battery







2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory

2x 18V 2,5Ah PXC-Twinpack CB Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory

18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

Ersatzschwert 30cm 1,1 Chain Saw Accessory Item No.: 4500191 Bar Code: 4006825663518 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory





















18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210 Einhell Accessory

18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory

18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory

Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory

2x18V 4,0Ah PXC-Twinpack CB 1 Battery Item No.: 4511489 Bar Code: 4006825638578 Einhell Accessory

Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory

Ersatzkette 30cm 1,1 45T 3/8 Chain Saw Accessory Item No.: 4500192 Bar Code: 4006825663532 Einhell Accessory

18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory



Ba Eir

# **Battery-Running-Times**

One Battery for All	sawing <sup>1</sup> (pieces)	sawing <sup>2</sup> (pieces)
1.5 Ah	53	59
2.0 Ah	70	78
2.5 Ah	88	98
3.0 Ah	105	117
4.0 Ah	140	156
5.2 Ah	182	203
6.0 Ah	210	234
8.0 Ah	280	312

For best performance select a battery with at least 4.0 Ah

#### Test setup:

1) wood - scantling 70x70 mm - BOOST

2) wood - scantling 70x70 mm - ECO