



**Cordless Chain Saw** 

GP-LC 36/35 Li-Solo

Item No.: 4501780

Ident No.: 21021

Bar Code: 4006825631920

The Einhell GP-LC 36/35 Li-Solo cordless chainsaw provides power and flexibility. It is a member of the Power X-Change family. Two 18 V PXC rechargeable batteries supply the Einhell brushless motor, a brushless electric motor, with power. Thanks to the high-quality OREGON guide bar and chain, it even cuts through larger trunks. The chain can be tensioned and changed without any tools. For safety there is a claw stop made of metal, kickback protection, instant-reaction chain brake and a chain catch bolt. The ergonomic softgrip makes the cordless chainsaw secure and comfortable to hold. The chain is lubricated automatically and a large opening is provided in the oil tank for topping up the oil. The batteries & charger are available separately

OWER X-CHANGE

#### Features & Benefits

- Member of the Power X-Change family, 2x18 V batteries necessary
- TWIN-Pack technology: 2x18V Power X-Change batteries more power
- Brushless motor more power and longer running time
- Toolless chain tensioning and changing
- Robust OREGON quality sword and sharp chain
- Ergonomic handle with Softgrip
- Solid metal claw stop
- Automatic chain lubrication
- Oil reservoir with sight glass for automatic chain lubrication
- Kickback protection with instant chain brake
- Chain catch bolt
- Recommendation for optimum results: 2x3Ah battery & higher
- Supplied without battery and charger (available separately)

### **Technical Data**

- Sword length 350 mm 33 cm - Max. cutting length - Chain cutting speed 15 m/s 115 mL - Oil tank capacity

# **Logistic Data**

- Product weight (kg) 4 kg - Gross weight (kg) 5.2 kg

- Dimensions single packaging 260 x 500 x 252 mm

- Pieces per export carton 2 Pieces - Gross weight export carton 11.5 kg

- Dimensions Export Carton 515 x 405 x 275 mm - Container quantity (20"/40"/40"HC) 976 | 1952 | 2196









 












## Available as special accessories



Spare Bar 35cm 1,1 Chain Saw Accessory Item No.: 4500197 Bar Code: 4006825632248 Einhell Accessory



18V 2,0Ah Power X-Change


Battery Item No.: 4511395 Bar Code: 4006825610369 **Einhell Accessory** 



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 **Einhell Accessory** 



 Power X-Twincharger 3A Charger Item No.: 4512069





Power X-Boostcharger 6A Charger

Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



Spare Chain 35cm 1,27 52T 3/8 Chain Saw Accessory Item No.: 4500196 Bar Code: 4006825632231 Einhell Accessory



18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396

Bar Code: 4006825610376 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 **Einhell Accessory** 



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

## **Battery-Running-Times**

One Battery for All	sawing <sup>1</sup>
	(pieces)
1.5 Ah	120
2.0 Ah	160
2.5 Ah	200
3.0 Ah	240
4.0 Ah	320
5.2 Ah	420
6.0 Ah	480
8.0 Ah	640

For best performance select a battery with at least 3.0 Ah

Test setup:

1) wood - scantling 70x70 mm