



Cordless Mitre Saw

TE-MS 18/210 Li-Solo

Item No.: 4300890 Ident No.: 21020

Bar Code: 4006825628074

The Einhell TE-MS 18/210 Li - Solo cordless crosscut saw is ideal for the home & workshed. Being a member of the Power X-Change family means there are no interfering cables & the range of operation is literally unlimited. Compact with carry handle, it offers plenty of features to keep the workplace clean. These include the turntable with precise angle setting, the tiltable saw head for exact miter cuts, cutting line laser, LED & clamp for securing the workpiece. The X-Tend supports can be adjusted without tools. Integrated limit stop for repeat cutting. The carbide-tipped precision saw blade was developed for cordless saws. The sawdust bag/chip extraction system keep the workplace/air clean. The batteries/charger are available separately.

OWER CHANGE

Features & Benefits

- Member of the Power X-Change family
- Boundless reach of action, no annoying cable, nothing to wind
- Compact, light construction and handle for easy transportation
- Turntable with precise angle setting for angular cuts
- Saw head tilts to the left and right for miter cutting
- X-Tend work supports with ergonomic singlehand operation facility
- High-grade precision saw blade, developed for cordless mitre saws
- Laser and LED for easy and safe use
- Clamping device for holding the workpiece securely in position
- Includes sawdust bag to keep the workplace clean
- Recommendation for best results: PXC 2.5 Ah battery or higher

Technical Data

- No-load speed (idle speed)
- Saw blade
- Number of saw teeth
- Mitre cut
- Swivelling range
- Cutting capacity 90° x 90°
- Cutting capacity 90° x 45°
- Cutting capacity 45° x 90°
- Cutting capacity 45° x 45°
- Diameter of suction adapter

Logistic Data

- Gross weight (kg)
- Dimensions single packaging
- Pieces per export carton
- Gross weight of export carton
- Dimensions export carton
- Container quantity (20"/40"/40"HC)

3000 min^-1 Ø210 x Ø30 mm 36 mm

 
7.8

9.5 540 x 361 x 305 mm 1 Pieces 9.5 kg 540 x 361 x 305 mm 384 | 780 | 1040









40 Pieces 45° - 0° 47° - 47° 120 x 60 mm 83 x 60 mm 120 x 34 mm 80 x 34 mm

Available as special accessories



E-Stand Stationary Saw Accessory Item No.: 4310620 Bar Code: 4006825584974 **Einhell Accessory**

18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210

Battery

Einhell Accessory

Item No.: 4511395

Einhell Accessory





18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory

18V 2,0Ah Power X-Change

Bar Code: 4006825610369



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



Stationary Saw Accessory Item No.: 4310614 Bar Code: 4006825660050 Einhell Accessory TCT circ saw blade 210x30 T48 Stat. Saw Accessory; Saw blade Item No.: 49587861 Bar Code: 4009315878614

MSS 1608







Einhell Accessory Sbl Set Ø 210x30x2,5 T24/42/60 Stat. Saw Accessory; Saw Blade Item No.: 49587805 Bar Code: 4009315878058

Einhell Accessory

18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



Sbl D 210x30x2,6 T24 Stat. Saw Accessory; Saw blade Item No.: 4502067 Bar Code: 4006825667790 Einhell Accessory



















18V 3,0 Ah Power-X-Change 2

MSS 1610 Stationary Saw Accessory Item No.: 4310615 Bar Code: 4006825637496 Einhell Accessory

18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 **Einhell Accessory**



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606 Einhell Accessory

18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory

Sbl Ø 210x30x1,8 T40 Stat. Saw Accessory; Saw blade Item No.: 49587852 Bar Code: 4009315878522 Einhell Accessory

Sbl Ø 210x30x1,8 T64 Stat. Saw Accessory; Saw blade Item No.: 49587862 Bar Code: 4009315878621 **Einhell Accessory**

Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 **Einhell Accessory**

Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory

GS mark belongs to the product itself only, excluded accessory Page 2

Battery-Running-Times

One Battery for All	sawing ¹ (pieces)
1.5 Ah	72
2.0 Ah	103
2.5 Ah	120
3.0 Ah	154
4.0 Ah	190
5.2 Ah	250
6.0 Ah	304
8.0 Ah	400

For best performance select a battery with at least 2.5 Ah

Test setup:

1) softwood - scantling 60x60 mm