







**TE-CS 18/190 Li BL - Solo** 

Item No.: 4331210

Ident No.: 21021

Bar Code: 4006825641547

The Einhell Cordless Handheld Circular Saw TP-CS 18/190 Li BL-Solo is part of the Power X-Change series and is compatible with all Einhell guide rails. The brushless motor delivers more power and longer running times. The saw is easy to operate - with tool-free adjustment (cutting depth, tilt angle) and easy saw blade changes thanks to the spindle lock. The splitter adapts to the cutting depth, while the parallel stop and the carbide saw blade enable precise cuts. The large handle helps prevent fatigue when working, and the LED lighting ensures optimum illumination of the working area. The high-quality baseplate is made of aluminum and is equipped with a dust extraction adapter. This product comes without a battery or charger.

OWER X-CHANGE

### **Features & Benefits**

- A member of the Power X-Change family
- Brushless motor more power and prolonged operation
- Easy adjustment without tools (cutting depth, tilt angle)
- Large handle for tireless working
- High-quality LED for optimum illumination of the cutting area
- High-quality baseplate made of aluminium
- Easy changing of the saw blade thanks to the spindle lock
- High-grade carbide blade for clean cuts
- Sawblade with 20mm and 30mm bore diameter can be used
- Dust extraction adapter to keep the workplace clean
- Compatible with the Einhell guide rail
- Parallel stop for precise cuts
- Supplied without battery and charger (available separately)

#### **Technical Data**

3800 min^-1 - No-load speed Ø190 x Ø20 mm - Saw Blade - Number of saw teeth 24 Pieces - Cutting depth at 90° 65 mm - Cutting depth at 45° 45 mm

## **Logistic Data**

- Product weight 3.23 kg - Gross weight single packaging 4.52 kg

380 x 230 x 320 mm - Dimensions single packaging

- Pieces per export carton 2 Pieces - Gross weight export carton 9.41 kg

- Dimensions export carton 475 x 395 x 340 mm - Container quantity (20"/40"/40"HC) 846 | 1756 | 2132















BEST



## Available as special accessories



Guide Rail Alu 2x1000mm Circular Saw Accessory Item No.: 4502118 Bar Code: 4006825632675 Einhell Accessory



2x 3,0Ah & Twincharger Kit PXC-Starter-Kit Item No.: 4512083 Bar Code: 4006825638509 Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus Battery Item No.: 4511502 Bar Code: 4006825644210



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512097 Bar Code: 4006825646962 Einhell Accessory



18V 2,0Ah Power X-Change Battery Item No.: 4511395 Bar Code: 4006825610369 Einhell Accessory

Einhell Accessory



18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396 Bar Code: 4006825610376 Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042 Bar Code: 4006825613704 Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger Item No.: 4512102 Bar Code: 4006825649536 Einhell Accessory



18V 2,5Ah Power X-Change Battery Item No.: 4511516 Bar Code: 4006825650518 Einhell Accessory



Power X-Fastcharger 4A Charger Item No.: 4512103 Bar Code: 4006825650228 Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437 Bar Code: 4006825616606



Power X-Twincharger 3A Charger Item No.: 4512069 Bar Code: 4006825629729 Einhell Accessory



Power X-Car Charger 3A Charger Item No.: 4512113 Bar Code: 4006825655377 Einhell Accessory

Einhell Accessory

Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB Battery Item No.: 4511524 Bar Code: 4006825656206 Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1 Battery Item No.: 4511489 Bar Code: 4006825638578



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit Item No.: 4512040 Bar Code: 4006825613681 Einhell Accessory



Power X-Boostcharger 6A Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 3,0Ah Power X-Change Plus Battery Item No.: 4511501 Bar Code: 4006825644197 Einhell Accessory



18V 3,0 Ah Power-X-Change 2 Battery Item No.: 4511341 Bar Code: 4006825590593 Einhell Accessory



Sägebl HM Mit-Dü 190x30 Z30 Handkreissägen-Zubehör Item No.: 49586956 Bar Code: 4009315869568 Einhell Accessory

# **Battery-Running-Times**

One Battery for All	sawing <sup>1</sup>
	(m)
1.5 Ah	18
2.0 Ah	24
2.5 Ah	30
3.0 Ah	37
4.0 Ah	49
5.2 Ah	63
6.0 Ah	73
8.0 Ah	98

For best performance select a battery with at least 2.5 Ah

1) wood - chipboard 19 mm