





Cordless Planer

TE-PL 18/82 Li - Solo

Item No.: 4345400

Ident No.: 11019

Bar Code: 4006825645934

The cordless planer Einhell TE-PL 18/82 Li - Solo is a high-performance hand-held planer for applications with a chip depth up to 2 mm. Large knife shafts and a solid aluminium soleplate deliver optimum, flat results. The soleplate has a V-shaped groove for easy chamfering. There is an automatic parking rest to protect both the planer and the workpiece. The ergonomic handle and soft grip ensure tireless and comfortable operation. The product is supplied with a parallel guide, a rebate depth stop and a TCT planing knife (reversible blade) for an excellent surface finish. As a member of the Power X-Change series, all the rechargeable batteries from the series can be used. 2.5 Ah Plus rechargeable batteries or higher are recommended.

WER X-CHANGE

Features & Benefits

- Member of the Power X-Change family
- Powerful hand-held planer for jobs with a chip depth of up to 2mm
- Large knife shaft for optimum planing results
- Automatic park rest protecting the planing knife and workpiece
- Solid aluminium soleplates for flat results
- Soleplate with 1 V-shaped groove for easy chamfering of edges
- Ergonomic handle for working without fatigue
- Safe and user-friendly handling due to soft grip
- Incl. parallel guide for straight and precise planing results
- Incl. rebate depth stop for making recesses with ease
- Incl. 1x TCT planing knife for a high surface quality
- Recommendation for optimum results: 2.5 Ah Plus battery & higher
- Supplied without battery and charger (available separately)



Technical Data

- Planing width 82 mm - Planing depth 2 mm - Rebate Depth 8 mm



- Product weight (kg) 2.44 3 32 - Gross weight (kg)

- Dimensions single packaging 289 x 180 x 187 mm

- Pieces per export carton 4 Pieces - Gross weight of export carton 14 kg

- Dimensions export carton 375 x 305 x 395 mm - Container quantities (20"/40"/40"HC) 2400 | 4800 | 6040



















Available as special accessories



18V 2,0Ah Power X-Change

Battery Item No.: 4511395

Bar Code: 4006825610369

Einhell Accessory



18V 4,0Ah PXC Starter Kit 1 PXC-Starter-Kit Item No.: 4512042

Bar Code: 4006825613704

Einhell Accessory



Power X-Twincharger 3A Charger

Item No.: 4512069

Bar Code: 4006825629729

Einhell Accessory



Power X-Boostcharger 6A

Charger Item No.: 4512064 Bar Code: 4006825629019 Einhell Accessory



18V 4,0Ah Power X-Change 1 Battery Item No.: 4511396

Bar Code: 4006825610376

Einhell Accessory



18V 5,2Ah Power X-Change Plus Battery Item No.: 4511437

Bar Code: 4006825616606

Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit

Item No.: 4512040

Bar Code: 4006825613681

Einhell Accessory



18V 3,0 Ah Power-X-Change 2

Battery Item No.: 4511341

Bar Code: 4006825590593

Einhell Accessory

Battery-Running-Times

One Battery for All	planing¹ (m)
1.5 Ah	16
2.0 Ah	25
2.5 Ah	28
3.0 Ah	37
4.0 Ah	48
5.2 Ah	58
6.0 Ah	78
8.0 Ah	96

For best performance select a battery with at least 2.5 Ah

1) softwood - spruce wood