



Einhell

EXPERT



Robot Lawn Mower

FREELEXO CAM 350

Item No.: 3413992

Ident No.: 21012

Bar Code: 4006825670530

The Einhell FREELEXO CAM 350 is part of the Power X-Change family, which can be combined with each other. Using an integrated camera and sensors, the FREELEXO CAM 350 recognises the boundaries of the lawn to be mowed by detecting lawns based on colours and structures. In addition, areas can be quickly excluded using magnetic tape. In addition, it has an LED display and a keypad for programming mowing times. The robotic lawn mower is designed for areas of up to 350 m². Delivery includes a 2.5 Ah battery, a charging station, 3 spare blades, 12 m guide cable, 5 m magnetic tape, 20 fastening hooks and 2 connecting clamps.

Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer runningtime
- Robot mower recognises mowing area thanks to integrated camera
- Intuitive keypad and LED display
- Programmable mowing times
- Safety sensors thanks to impact, tilt and lift sensors
- Automatic return to charging station and charging process
- Integrated rain sensor
- PIN code for theft protection
- Cutting height adjustment: 20 - 60 mm
- Suitable for slopes up to 25%
- Including 5 m magnetic tape for short-term boundary in the garden
- Carrying handle for comfortable transport
- For lawn area up to 350 m²
- 20x fixing hooks
- 2x connecting clips and 3x spare blades
- Delivery incl. 1x 2.5 Ah PXC battery and charging station

 
 
 


Technical Data

- Power	18 V
- Accumulator	18 V 2500 mAh Li-Ion
- Cutting width	18 cm
- Slope	25 %
- Cutting height adjustment	20 mm - 60 mm
- Recommended area	350 m ²
- Guide wire	12 m
- Hooks	20 Pieces
- Spare blades	3
- Connecting clamps	2 Pieces

Logistic Data

- Product weight (kg)	12.2
- Gross weight (kg)	16.2
- Dimensions single packaging	690 x 430 x 305 mm
- Pieces per export carton	1 Pieces
- Gross weight of export carton	14.55 kg
- Dimensions export carton	700 x 440 x 315 mm
- Container quantities (20"/40"/40"HC)	294 602 704

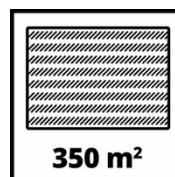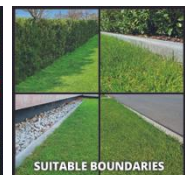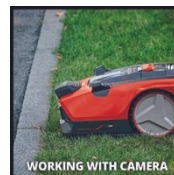

Available as special accessories



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Perimeter wire 50 m
Robot Lawn Mower Accessory
Item No.: 3414021
Bar Code: 4006825648782
Einhell Accessory



Fastening hook 100 psc
Robot Lawn Mower Accessory
Item No.: 3414023
Bar Code: 4006825648805
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



Repair Kit
Robot Lawn Mower Accessory
Item No.: 3414026
Bar Code: 4006825657968
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



Spare blades 12 psc
Robot Lawn Mower Accessory
Item No.: 3414020
Bar Code: 4006825648775
Einhell Accessory



Connecting clamps 4 psc
Robot Lawn Mower Accessory
Item No.: 3414022
Bar Code: 4006825648799
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



robot lawn mower garage
Robot Lawn Mower Accessory
Item No.: 3414024
Bar Code: 4006825654417
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



Cleaning Kit
Robot Lawn Mower Accessory
Item No.: 3414025
Bar Code: 4006825657951
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



Magnetic Tape 10m
Robot Lawn Mower Accessory
Item No.: 3414029
Bar Code: 4006825670936
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory



Magnetic Tape 20m
Robot Lawn Mower Accessory
Item No.: 3414028
Bar Code: 4006825670929
Einhell Accessory