



Einhell

EXPERT

POWER X-CHANGE

Cordless Mini Circular Saw

TE-CS 18/89 Li - Solo

Item No.: 4331100

Ident No.: 21022

Bar Code: 4006825646184

The Einhell cordless mini handheld circular saw TE-CS 18/89 Li-Solo is small, light and handy – comfortable to use, making it pleasant to work with. As a member of the Power X-Change family, any PXC battery can be combined with the mini handheld circular saw. Battery and charger from the PXC series are not included. These are available separately. The cutting depth can be adjusted without tools. Thanks to the spindle lock, changing the saw blade is also very easy. The carbide saw blade and the rip fence ensure clean, precise cuts with a max. cutting depth of 28 mm. The high-quality aluminium saw table ensures optimum stability. A vacuum cleaner adapter on the housing ensures a clean workplace.

Features & Benefits



- Easy, tool-free adjustment of the cutting depth
- High-quality saw table made of aluminium for optimum stability
- Easy changing of the saw blade thanks to the spindle lock
- High-grade carbide blade for clean cuts
- Max. cutting depth of 28 mm thanks to the Ø89 mm saw blade
- Dust extraction adapter to keep the workplace clean
- Parallel stop for precise cuts
- Member of the Power X-Change family
- Small, lightweight and handy – for comfortable working

Technical Data

- Voltage 18 V
- rotation speed 2500 min⁻¹
- saw blade diameter 89 mm
- Cutting depth wood 28 mm

Logistic Data

- Product weight (kg) 1.77
- Gross weight (kg) 2.6
- Dimensions single packaging 431 x 137 x 152 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 11 kg
- Dimensions export carton 445 x 285 x 325 mm
- Container quantities (20"/40"/40"HC) 2768 | 5680 | 6520

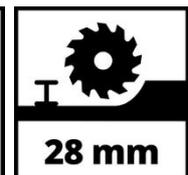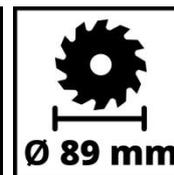

Available as special accessories



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



Mini-Kreissäge Set Ø 89 5tg
Mini-Handkreissägen-Zubehör
Item No.: 49575915
Bar Code: 4009315759159
Einhell Accessory

Battery-Running-Times

One Battery for All


sawing¹
(m)

1.5 Ah	26
2.0 Ah	36
2.5 Ah	50
3.0 Ah	57
4.0 Ah	72
5.2 Ah	104
6.0 Ah	120
8.0 Ah	144

Test setup:

1) wooden board - chipboard 19 mm