



Einhell

CLASSIC



USB-Battery-Adapter

TC-CP 18 Li USB-Solo

Item No.: 4514120

Ident No.: 21021

Bar Code: 4006825608878

The Einhell USB battery adapter TC-CP 18 Li USB-Solo is a practical and mobile external power source for charging a mobile phone, tablet, MP3 player and many other small power consumers which are used on the move. The power supply is from a system battery from the innovative Power X-Change family for delivering plenty of power to recharge the empty consumer products at any time. With 2 USB ports on the housing, two devices can be recharged simultaneously. For fast charging, one of the USB ports is supplied with a powerful 2.1 A charging current. Supplied without battery and charger.

Features & Benefits



- 2 USB ports for charging two devices simultaneously
- External power source for charging a mobile phone, tablet or Mp3
- 1 USB port with 2.1A for fast charging
- LED status indicator
- Supplied without battery and charger (available separately)
- Charging time depends on the battery capacitance of the device
- A member of the Power X-Change family

Technical Data

| | |
|------------------------|----------|
| - Voltage input | 18 V |
| - Voltage output | 5 V |
| - Amount of USB-ports | 2 Pieces |
| - Output of USB port 1 | 1 A |
| - Output of USB port 2 | 2.1 A |

Logistic Data

| | |
|--------------------------------------|--------------------|
| - Tool weight | 0.06 kg |
| - Gross Weight | 0.09 kg |
| - Pieces per export carton | 60 Pieces |
| - Gross weight of export carton | 7.2 kg |
| - Dimensions Export Carton | 350 x 335 x 290 mm |
| - Container quantity (20"/40"/40"HC) | 43200 |

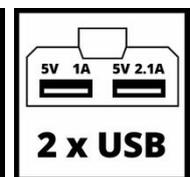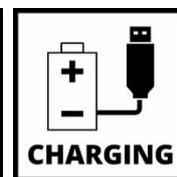

Available as special accessories



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory

Battery-Running-Times

| One Battery for All |  charging ¹⁾ (h) |
|---------------------|--|
| 1.5 Ah | 8 |
| 2.0 Ah | 12 |
| 2.5 Ah | 13.5 |
| 3.0 Ah | 16 |
| 4.0 Ah | 24 |
| 5.2 Ah | 32 |
| 6.0 Ah | 36 |
| 8.0 Ah | 48 |

Test setup:

1) -