



Einhell

EXPERT

POWER X-CHANGE

Cordless Pruning Chain Saw

GE-PS 18/15 Li BL-Solo

Item No.: 4600040

Ident No.: 21012

Bar Code: 4006825671612

Thanks to its 12.5 cm cutting length, the Einhell cordless pruning chain saw GE-PS 18/15 Li BL-Solo is ideally suited for cutting trees and shrubs as well as for shredding green cuttings and hewing. It can be combined with all Power X-Change batteries and chargers. The device is powered by a PurePOWER brushless motor for more power and longer runtime. After online registration, there is a 10-year warranty on the motor. The sword and the chain can be changed without tools. Delivery includes a sword cover, a dosing aid for oiling and a hexagon socket wrench for retensioning the chain. Delivery does not include battery or charger.

Features & Benefits

- Member of the Power X-Change family, 1x 18 V battery required
- Brushless motor - more power and longer running time
- PurePOWER Brushless - 10-year motor warranty after registration
- Perfect for pruning and shaping trees and bushes
- For shredding green cuttings and cutting squared timber
- Low vibration thanks to highly efficient motor
- Easy maintenance with tool-free guide bar and chain replacement
- High-quality guide bar and chain set for high cutting performance
- Safe use thanks to hand guard and folding chain cover
- Storage surface with soft grip for safe use with both hands
- Slim and lightweight design for ergonomic operation
- Blade cover for safe storage
- Incl. measuring help for oiling the chain
- Incl. hexagon key on the unit for retensioning the chain
- Supplied without battery and charger (sold separately)




Technical Data

- Voltage 18 V
- Chain cutting speed 4.8 m/s
- Sword length 158 mm
- Max. cutting length 125 mm

Logistic Data

- Product weight (kg) 1.115
- Gross weight (kg) 1.865
- Dimensions single packaging 460 x 110 x 155 mm
- Pieces per export carton 8 Pieces
- Gross weight of export carton 10 kg
- Dimensions export carton 470 x 460 x 320 mm
- Container quantity (20"/40"/40"HC) 3360 | 6720 | 7680

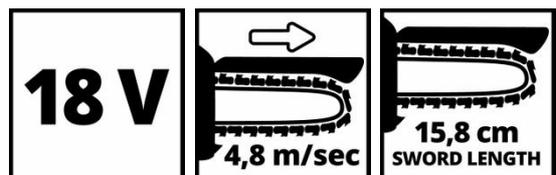

Available as special accessories



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V 3,0 Ah Power-X-Change 1
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Ersatzkette 15cm 1,0 28T 7,62
Chain Saw Accessory
Item No.: 4500174
Bar Code: 4006825673647
Einhell Accessory



Ersatzschwert 15cm 1,0
Chain Saw Accessory
Item No.: 4500163
Bar Code: 4006825672503
Einhell Accessory

Battery-Running-Times

One Battery for All	 sawing ¹ (pieces)
1.5 Ah	95
2.0 Ah	127
2.5 Ah	158
3.0 Ah	190
4.0 Ah	254
5.2 Ah	329
6.0 Ah	380
8.0 Ah	506

Test setup:

1) softwood - round soft wood Ø 50 mm