



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Surface Brush

**PICOBELLA 18/90**

**Item No.: 3424220**

Ident No.: 21012

Bar Code: 4006825671759

The Einhell cordless surface brush PICOBELLA 18/90 is a versatile helper for cleaning indoors and outdoors, such as in the garden or in the home. As a member of the Power X-Change battery system, each battery in the system can be combined with the cordless cleaning brush. Equipped with a 2-stage speed adjustment, a battery cover in accordance with water protection class IPX4 and a splash guard brush cover can be cleaned with various brushes and pads. For this purpose, the following are included: 1x brush MEDIUM 90/20, 1x brush SOFT 120/50, 1x melamine foam pad, 1x microfibre pad, 1x kitchen fibre pad, 1x pad holder and a wall mount. Supplied without battery or charger.

## Features & Benefits

- Member of the Power X-Change family
- Interior and exterior cleaning for home, car and garden
- IPX4 water protection class makes it ideal for wet cleaning
- Removable splash guard to protect against dirt and moisture
- 2-stage speed control for optimum power setting
- Tool-free brush change thanks to quick-release and hook and loop
- Incl. 1 x brush SOFT 120/50, 1x brush MEDIUM 90/20
- Incl. 3 cleaning pads (melamine, microfibre, kitchen fibre)
- Incl. 1 x pad holder
- Incl. practical wall holder for space-saving storage
- Soft grip surfaces for safe and comfortable work
- Supplied without battery and without charger (available separate)




## Technical Data

- Voltage 18 V
- Rotation speed 190 - 350 min<sup>-1</sup>
- Diameter of brush 120 mm
- Working width (brush SOFT) 50 mm
- Working width (brush MEDIUM) 90 mm

## Logistic Data

- Product weight (kg) 1.19
- Gross weight (kg) 2.81
- Dimensions single packaging 485 x 190 x 240 mm
- Pieces per export carton 6 Pieces
- Gross weight of export carton 19.2 kg
- Dimensions export carton 590 x 500 x 490 mm
- Container quantity (20"/40"/40"HC) 1008 | 2208 | 2760

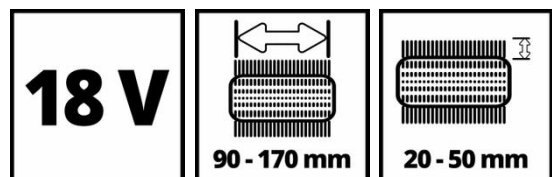

## Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Akku  
Battery  
Item No.: 4511502  
Bar Code: 4006825644210



4,0 Ah Power X-Change Akku  
Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



2x2 Power X-Quattrocharger 4A  
Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



Power X-Fastcharger 4A  
Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A  
Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1  
PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



5,2Ah & 4A Fastcharger  
PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578  
Einhell Accessory



18V 3,0 Ah Power-X-Change 2  
Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger  
PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory



3,0 Ah Power X-Change Plus  
Akku  
Battery  
Item No.: 4511501  
Bar Code: 4006825644197



Brush SOFT 170/40  
Surface Brush Accessory  
Item No.: 3424130  
Bar Code: 4006825673081  
Einhell Accessory



Brush MEDIUM 90/20  
Surface Brush Accessory  
Item No.: 3424132  
Bar Code: 4006825673104  
Einhell Accessory



Reinigungspad Set  
Surface Brush Accessory  
Item No.: 3424134  
Bar Code: 4006825673128  
Einhell Accessory



18V 2,5Ah PXC Starter Kit  
PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



18V 2,5Ah Power X-Change  
Battery  
Item No.: 4511516  
Bar Code: 4006825650518  
Einhell Accessory



2x 5,2Ah & Twincharger Kit  
PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



Power X-Car Charger 3A  
Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack  
Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



PXC Battery Mounting Gadget  
PXC-Battery Accessory  
Item No.: 4514155  
Bar Code: 4006825658774  
Einhell Accessory



Power X-Boostcharger 6A  
Charger  
Item No.: 4512064  
Bar Code: 4006825629019  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus  
Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



5,2 Ah Power X-Change Plus  
Akku  
Battery  
Item No.: 4511437  
Bar Code: 4006825616606



18V 4,0Ah Power-X-Change Plus  
Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



Brush SOFT 120/50  
Surface Brush Accessory  
Item No.: 3424131  
Bar Code: 4006825673098  
Einhell Accessory



Bürste ULTRA 95/25 (Messing)  
Surface Brush Accessory  
Item No.: 3424133  
Bar Code: 4006825673111  
Einhell Accessory





2,0 Ah Power X-Change Akku  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory

## Battery-Running-Times

| One Battery for All | <br>cleaning <sup>1</sup><br>(min.) | <br>cleaning <sup>2</sup><br>(min.) |
|---------------------|--|--|
| 1.5 Ah              | 160  | 110  |
| 2.0 Ah              | 210  | 150  |
| 2.5 Ah              | 260  | 190  |
| 3.0 Ah              | 315  | 225  |
| 4.0 Ah              | 420  | 300  |
| 5.2 Ah              | 550  | 390  |
| 6.0 Ah              | 630  | 450  |
| 8.0 Ah              | 840  | 600  |

**Test setup:**

1) no-load - Min. electronic speed

2) no-load - Max. electronic speed