



# Einhell

# EXPERT



Robot Lawn Mower

**FREELEXO CAM 500**

**Item No.: 3413991**

Ident No.: 21033

Bar Code: 4006825663525

The Einhell FREELEXO CAM 500 is part of the powerful Power X-Change family, which offers unlimited flexibility within the system family. Using an integrated camera, the FREELEXO CAM 500 recognizes the boundaries of the lawn to be mowed by detecting lawns based on colours and structures. Furthermore, areas can be demarcated for short periods of time using magnetic tape. In addition, it has an LED display and a keypad with which the mowing times are programmed. The robotic lawn mower is designed for a lawn area of up to 500 m<sup>2</sup>. Delivery includes a 3.0 Ah battery, a charging station, 3 spare blades, 12 m guide cable, 5 m magnetic tape, 25 fixing hooks and 2 connecting clamps.

## Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Brushless motor - more power and longer runtime
- Robotic mower detects mowing area thanks to integrated camera
- Intuitive keypad and LED display
- Programmable mowing times
- Safety sensor with shock, tilt and lift sensors
- Return to charging station and charging process automatically
- Integrated rain sensor
- Theft protection thanks to PIN code
- Cutting height adjustment: 20 - 60 mm
- Suitable for slopes up to 25%
- Including magnetic tape for short-term demarcation in the garden
- Carrying handle for comfortable transport
- Lawns up to 500 m<sup>2</sup>
- 12m guide cable for easy installation around the charging station
- 25x fixing hooks
- 2x connecting clamps and 3x spare blades
- Supplied with 1x 3.0 Ah PXC battery and charging station



## Technical Data

- |                             |                          |
|-----------------------------|--------------------------|
| - Power                     | 18 V                     |
| - Accumulator               | 18 V   3000 mAh   Li-Ion |
| - Cutting width             | 18 cm                    |
| - Slope                     | 25 %                     |
| - Cutting height adjustment | 20 mm - 60 mm            |
| - Recommended area          | 500 m <sup>2</sup>       |
| - Guide wire                | 12 m                     |
| - Hooks                     | 20 Pieces                |
| - Spare blades              | 3                        |
| - Connecting clamps         | 2 Pieces                 |



## Logistic Data

- |  |                    |
|--|--------------------|
| - Product weight (kg)                  | 12.4               |
| - Gross weight (kg)                    | 16.4               |
| - Dimensions single packaging          | 690 x 430 x 305 mm |
| - Pieces per export carton             | 1 Pieces           |
| - Gross weight of export carton        | 14.55 kg           |
| - Dimensions export carton             | 700 x 450 x 335 mm |
| - Container quantities (20"/40"/40"HC) | 294   602   688    |



## Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery  
Item No.: 4511502  
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



Perimeter wire 50 m  
Robot Lawn Mower Accessory  
Item No.: 3414021  
Bar Code: 4006825648782  
Einhell Accessory



Fastening hook 100 psc  
Robot Lawn Mower Accessory  
Item No.: 3414023  
Bar Code: 4006825648805  
Einhell Accessory



Power X-Fastcharger 4A Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



Repair Kit  
Robot Lawn Mower Accessory  
Item No.: 3414026  
Bar Code: 4006825657968  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory



Magnetic Tape 10m  
Robot Lawn Mower Accessory  
Item No.: 3414029  
Bar Code: 4006825670936  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



Spare blades 12 psc  
Robot Lawn Mower Accessory  
Item No.: 3414020  
Bar Code: 4006825648775  
Einhell Accessory



Connecting clamps 4 psc  
Robot Lawn Mower Accessory  
Item No.: 3414022  
Bar Code: 4006825648799  
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



robot lawn mower garage  
Robot Lawn Mower Accessory  
Item No.: 3414024  
Bar Code: 4006825654417  
Einhell Accessory



Power X-Car Charger 3A Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



Cleaning Kit  
Robot Lawn Mower Accessory  
Item No.: 3414025  
Bar Code: 4006825657951  
Einhell Accessory



3,0 Ah Power X-Change Plus Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



5,2 Ah Power X-Change Plus Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



Magnetic Tape 20m  
Robot Lawn Mower Accessory  
Item No.: 3414028  
Bar Code: 4006825670929  
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



2,0 Ah Power X-Change  
Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory