



# Einhell

# EXPERT

## POWER X-CHANGE

Cordless Coffee Maker

**TE-CF 18 Li-Solo**

**Item No.: 4609990**

Ident No.: 21023

Bar Code: 4006825672510

With the Einhell cordless coffee maker TE-CF 18 Li-Solo, you can enjoy fresh coffee anywhere. As part of the Power X-Change family, it can be used in combination with any battery or charger from the system. The cordless coffee maker enables quick preparation of filter coffee or commercial coffee pads in about 5 minutes, has a removable 240 ml water tank and comes with a dustproof stainless-steel coffee cup with lid. Lightweight and portable thanks to its carrying handle, it is perfect for on the go. Its rubber feet ensure stability. It comes with a measuring spoon, a ground coffee container with filter, and a coffee pad holder. Comes without battery or charger.

## Features & Benefits

- Member of the Power X-Change family, 1 x 18 V battery required
- 2-in-1: filter coffee machine and coffee pad machine in one
- Coffee making at max. 80 °C for optimum enjoyment
- Removable 240 ml water tank for one cup of coffee
- For cups up to 90 mm height
- Easy transport thanks to integrated handle
- Cup holder prevents the cup from falling out during transport
- Rubber feet for secure standing
- Incl. stainless steel coffee cup with dust-proof lid
- Incl. dosing spoon
- Incl. coffee powder container with 1 x coffee filter
- Incl. container for commercially available coffee pads
- Supplied without battery and charger (sold separately)




## Technical Data

- Tank volume 0.24 L

## Logistic Data

- Product weight (kg) 1.17
- Gross weight (kg) 1.74
- Dimensions single packaging 322 x 185 x 267 mm
- Pieces per export carton 4 Pieces
- Gross weight of export carton 9.7 kg
- Dimensions export carton 655 x 380 x 282 mm
- Container quantity (20"/40"/40"HC) 1632 | 3360 | 3780

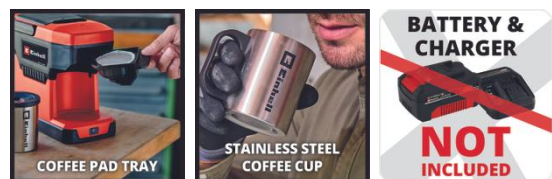

## Available as special accessories



4-6 Ah Multi-Ah Power X-Change Plus Battery  
Item No.: 4511502  
Bar Code: 4006825644210



4,0 Ah Power X-Change Battery  
Item No.: 4511396  
Bar Code: 4006825610376  
Einhell Accessory



Power X-Fastcharger 4A Charger  
Item No.: 4512103  
Bar Code: 4006825650228  
Einhell Accessory



Power X-Twincharger 3A Charger  
Item No.: 4512069  
Bar Code: 4006825629729  
Einhell Accessory



Power X-Car Charger 3A Charger  
Item No.: 4512113  
Bar Code: 4006825655377  
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack Battery  
Item No.: 4511526  
Bar Code: 4006825656695  
Einhell Accessory



PXC Battery Mounting Gadget PXC-Battery Accessory  
Item No.: 4514155  
Bar Code: 4006825658774  
Einhell Accessory



Power X-Caravan Charger 3A Charger  
Item No.: 4512136  
Bar Code: 4006825664010  
Einhell Accessory



18V 4-6Ah & 6A Boostcharger PXC-Starter-Kit  
Item No.: 4512143  
Bar Code: 4006825667653  
Einhell Accessory



5,2 Ah Power X-Change Plus Battery  
Item No.: 4511437  
Bar Code: 4006825616606  
Einhell Accessory



18V 4,0Ah Power-X-Change Plus Battery  
Item No.: 4511553  
Bar Code: 4006825660869  
Einhell Accessory



Coffee Cup TE-CF 18 Li-Solo Coffee Machine/Water Cooker Ac  
Item No.: 4609991  
Bar Code: 4006825672831  
Einhell Accessory



18V 4Ah PXC Plus Twinpack Battery  
Item No.: 4511629  
Bar Code: 4006825673685  
Einhell Accessory



18V 2,0Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512040  
Bar Code: 4006825613681  
Einhell Accessory



18V 2,5Ah PXC Starter Kit PXC-Starter-Kit  
Item No.: 4512097  
Bar Code: 4006825646962  
Einhell Accessory



2x2 Power X-Quattrocharger 4A Charger  
Item No.: 4512102  
Bar Code: 4006825649536  
Einhell Accessory



2x 5,2Ah & Twincharger Kit PXC-Starter-Kit  
Item No.: 4512108  
Bar Code: 4006825652376  
Einhell Accessory



18V 3,0 Ah Power-X-Change 1 Battery  
Item No.: 4511341  
Bar Code: 4006825590593  
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1 PXC-Starter-Kit  
Item No.: 4512112  
Bar Code: 4006825655766  
Einhell Accessory



5,2Ah & 4A Fastcharger PXC-Starter-Kit  
Item No.: 4512114  
Bar Code: 4006825656787  
Einhell Accessory



3,0 Ah Power X-Change Plus Battery  
Item No.: 4511501  
Bar Code: 4006825644197  
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus Battery  
Item No.: 4511600  
Bar Code: 4006825665055  
Einhell Accessory



Power X-Boostcharger 8A Charger  
Item No.: 4512155  
Bar Code: 4006825670554  
Einhell Accessory



PXC Battery Protector PXC-Battery Accessory  
Item No.: 4140151  
Bar Code: 4006825670844  
Einhell Accessory



18V 3,0Ah SEALED PXC Plus A2 Battery  
Item No.: 4511618  
Bar Code: 4006825672794  
Einhell Accessory



18V 4,0Ah SEALED PXC Plus A1 Battery  
Item No.: 4511627  
Bar Code: 4006825673227  
Einhell Accessory



18V 3Ah PXC Plus Twinpack Battery  
Item No.: 4511631  
Bar Code: 4006825673692  
Einhell Accessory



2,0 Ah Power X-Change Battery  
Item No.: 4511395  
Bar Code: 4006825610369  
Einhell Accessory



18V Battery Charger 3,0A - PXC  
Charger  
Item No.: 4514095  
Bar Code: 4006825655292  
Einhell Accessory



18V 4,0Ah PXC Starter Kit B1  
PXC-Starter-Kit  
Item No.: 4512042  
Bar Code: 4006825613704  
Einhell Accessory



5,2 Ah PXC Starter-Kit  
PXC-Starter-Kit  
Item No.: 4512147  
Bar Code: 4006825675153  
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB  
B1  
Battery  
Item No.: 4511489  
Bar Code: 4006825638578